

Assembly of Scudo welding partition

Scudo welding panels are delivered in four parts - two uprights with feet and two panels. These are easily assembled as detailed in this leaflet.




Attach panels

Line up the two panels and fix together using M8 x 16 bolts and M8 Nylock nuts.

Attach uprights

Attach the uprights to the panel assembly using M8 x 20 countersunk bolts and M8 Nylock nuts.

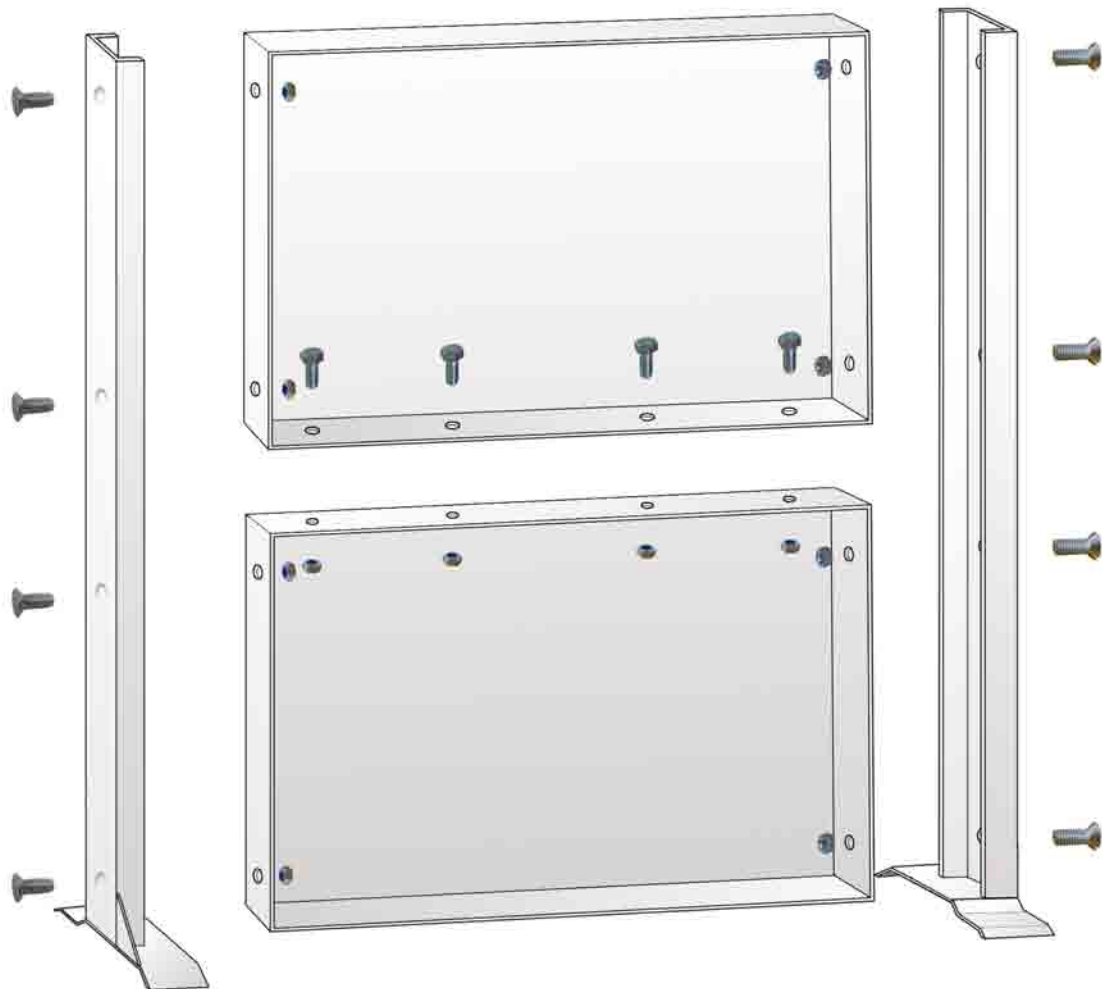

NB: Nuts and bolts are not to scale

