




ASSEMBLY INSTRUCTION
– JUST FOLLOW ME

DOUBLE HINGED DOOR


KIT 36905510



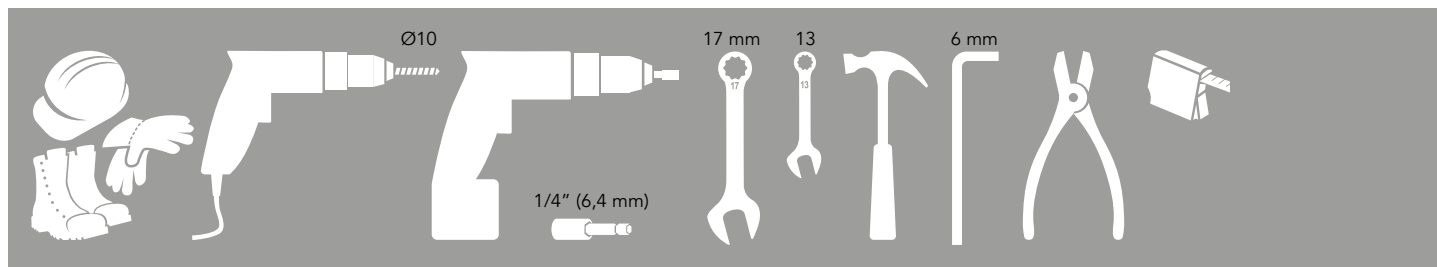


Kit Double hinged door 36905510


Kit Double Hinged door

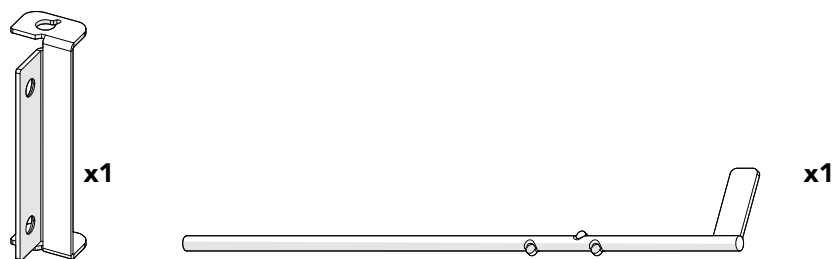


Kit Hinge 36904990

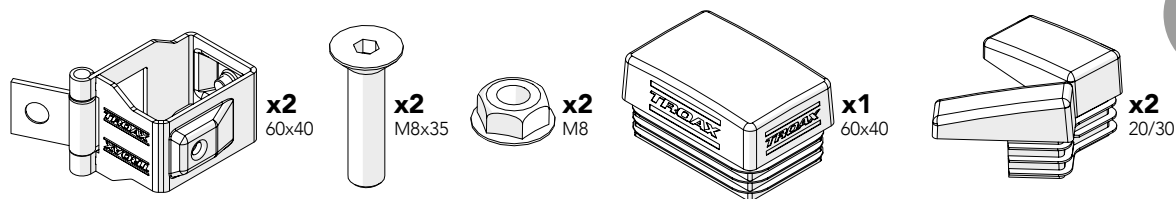








Bag for kit 5510 88695510

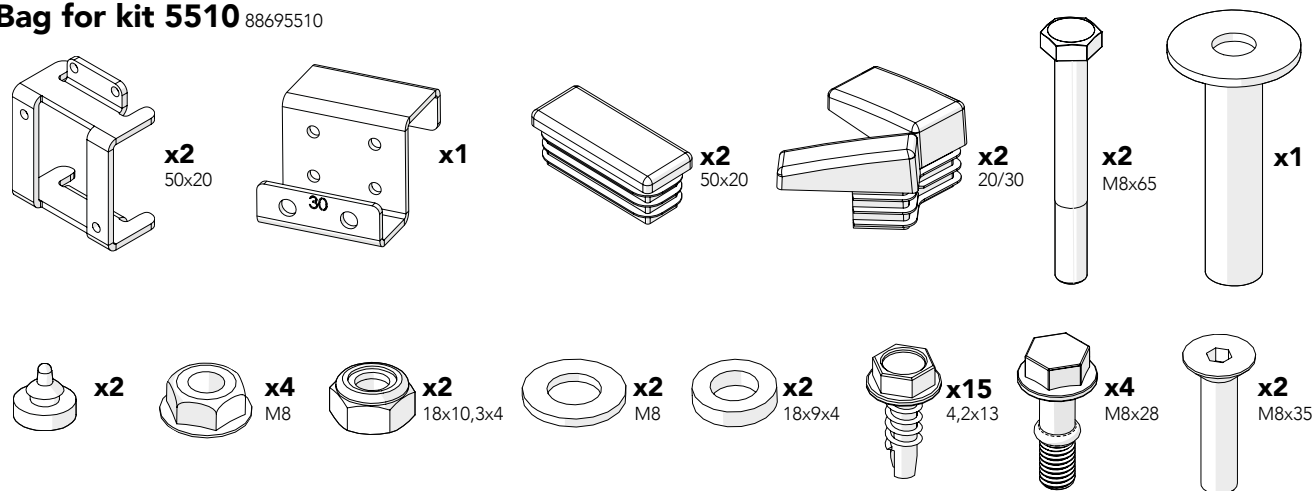

Troax sign 89200000




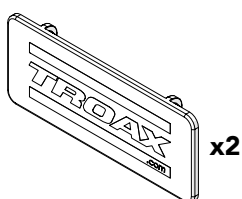


Kit Hinge 36904990

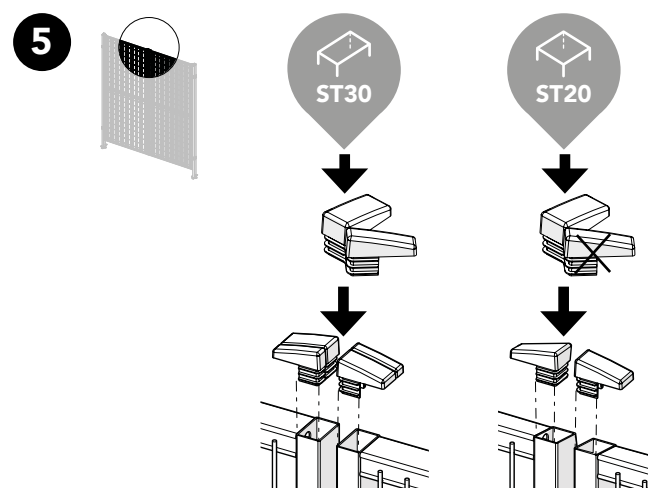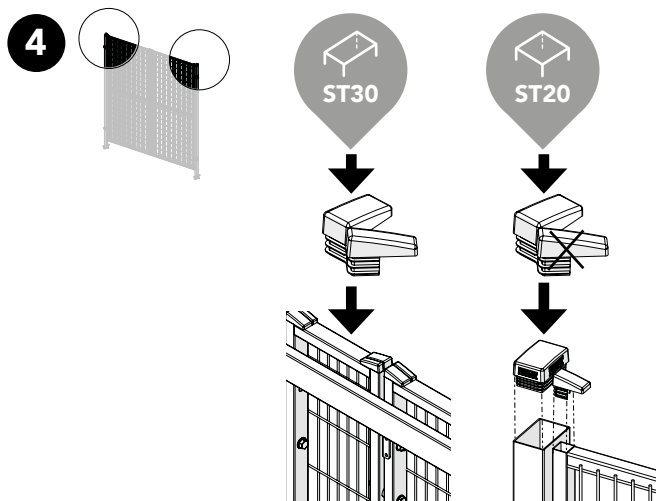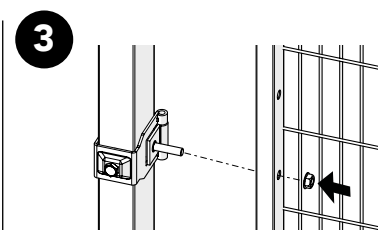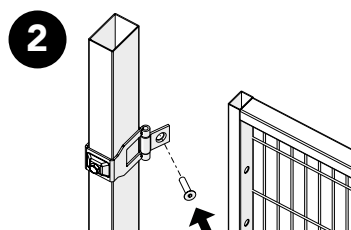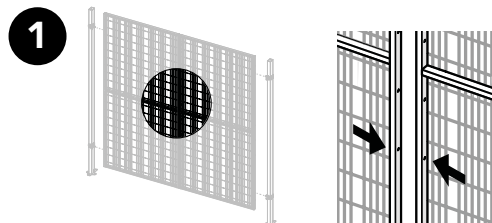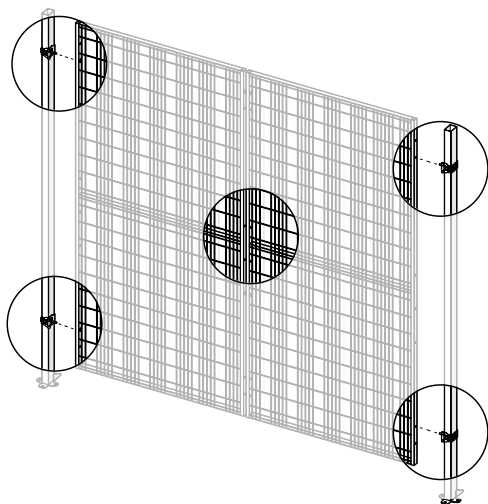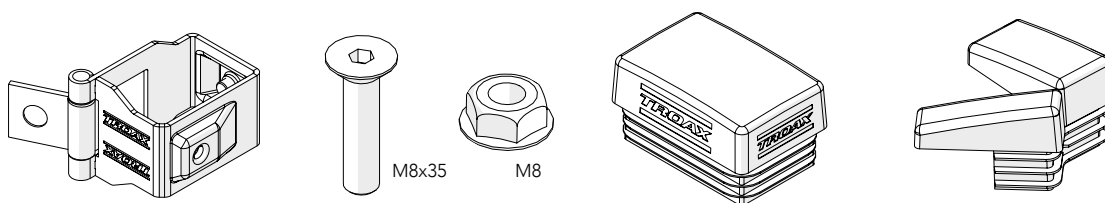


Kit Double Hinged

88955510
Bag for kit
5510 36904990

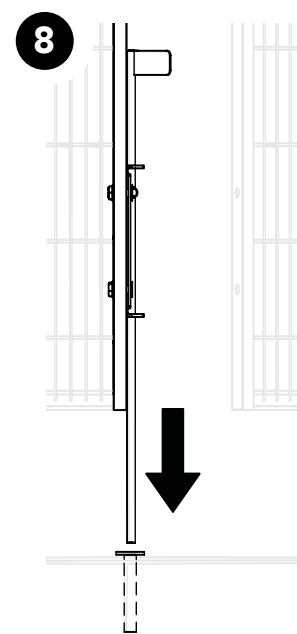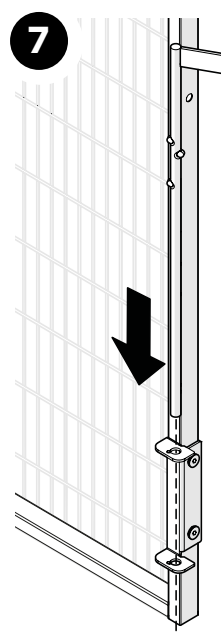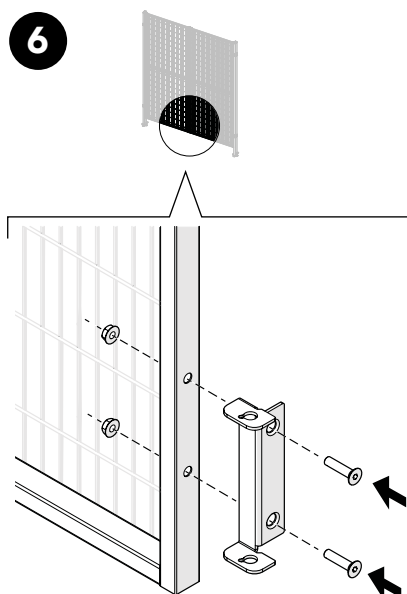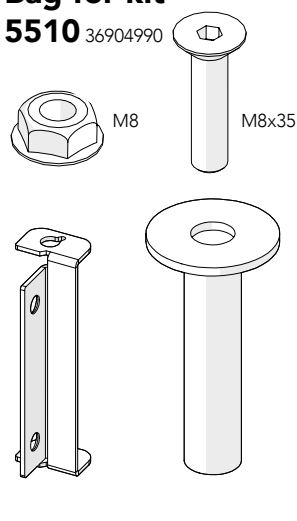


Bag for kit

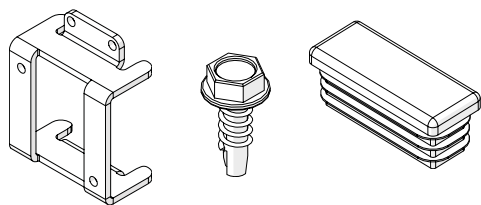


9

Door panel width

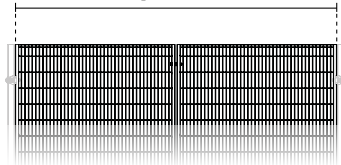


2000 = 2110
2400 = 2510
3000 = -


Door stay length

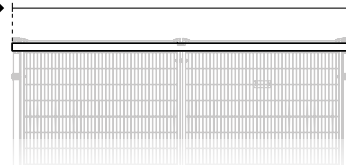


10

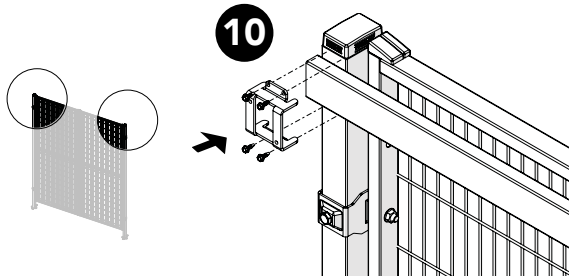



11

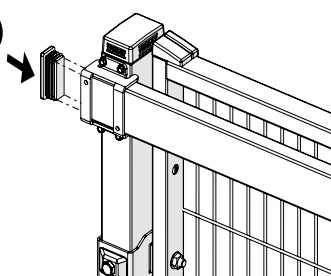

12

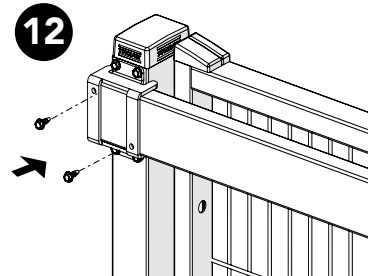


Bag for kit

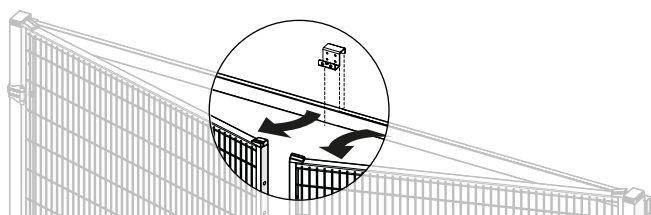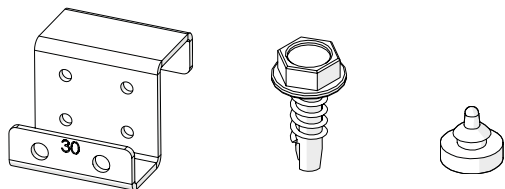


13




A

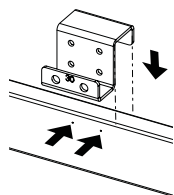


B

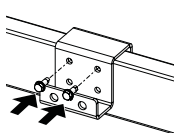


C

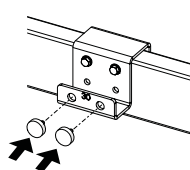


A

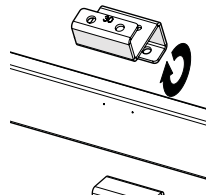


B

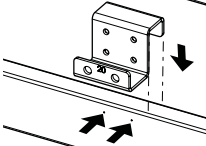


C

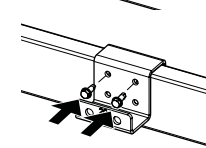


D

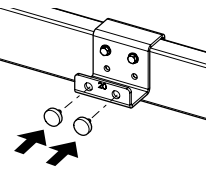

Bag for kit




M8




M8x65

14

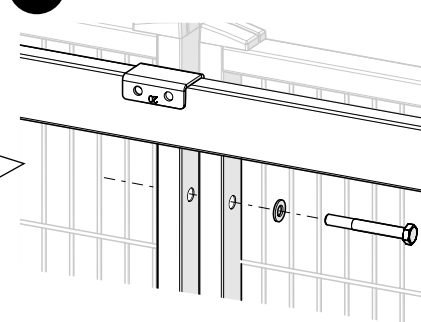


18x10,3x4


18x9x4

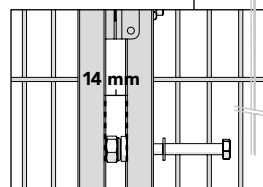

15

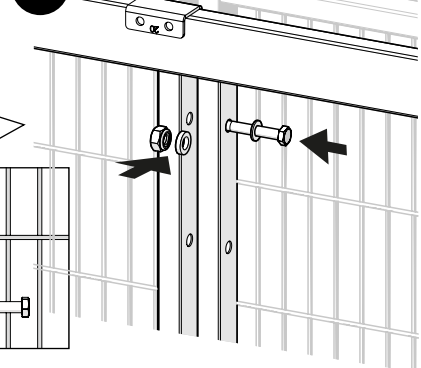

16

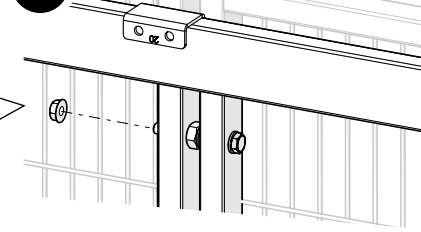

M8

