





ASSEMBLY INSTRUCTION
– JUST FOLLOW ME





HINGED DOOR

KIT 36905000

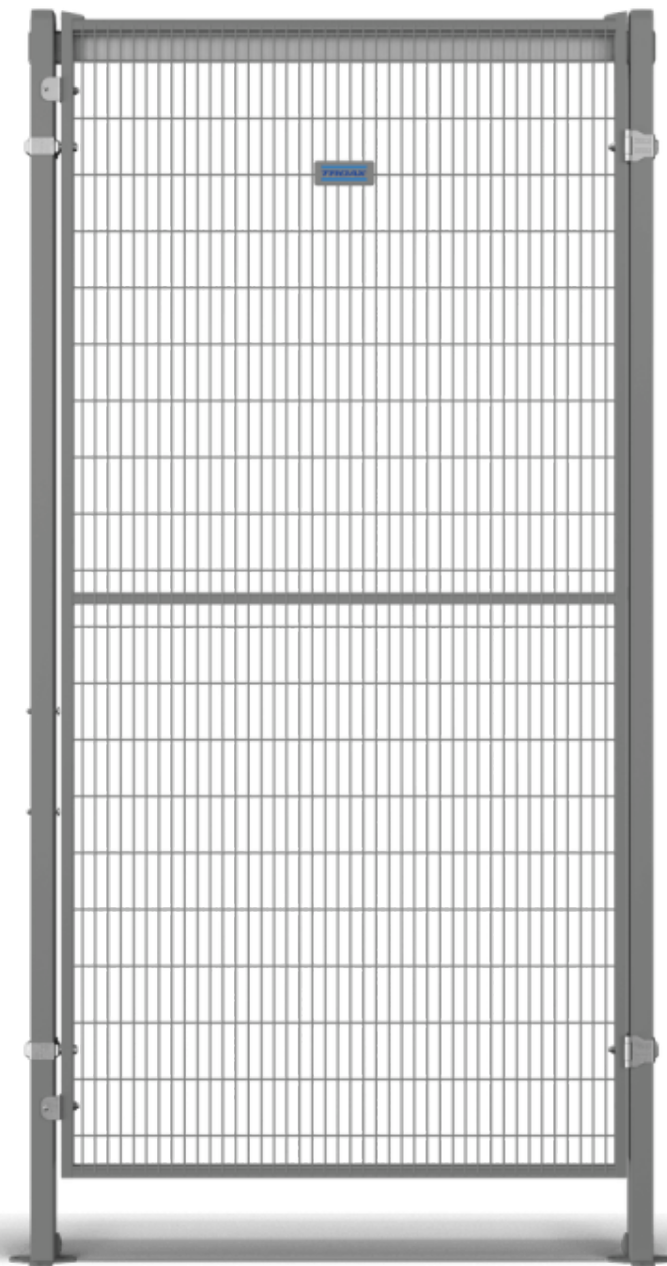


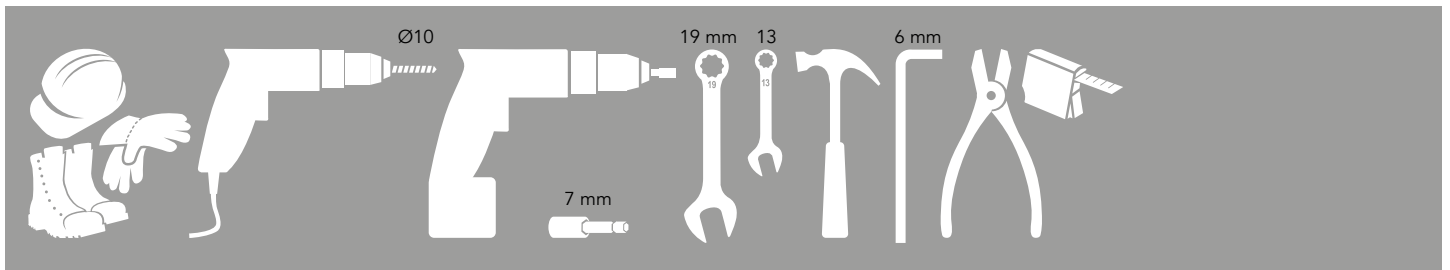


Kit Hinged door 36905000

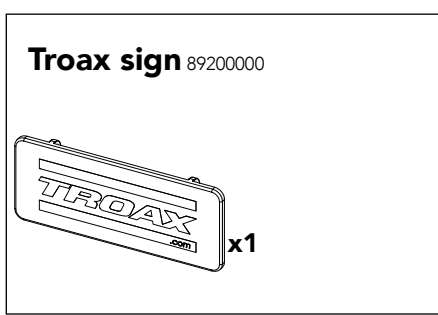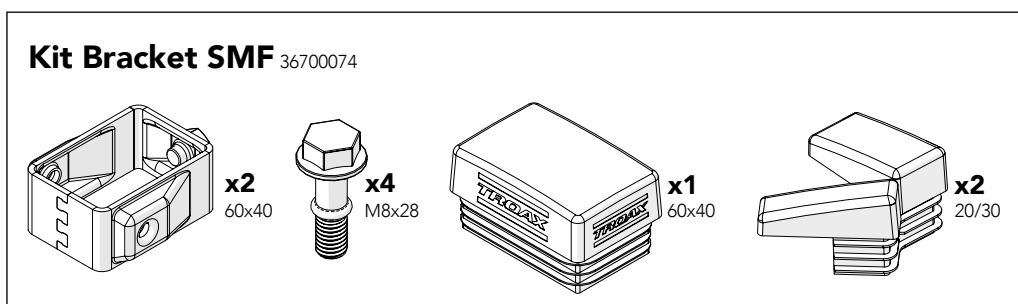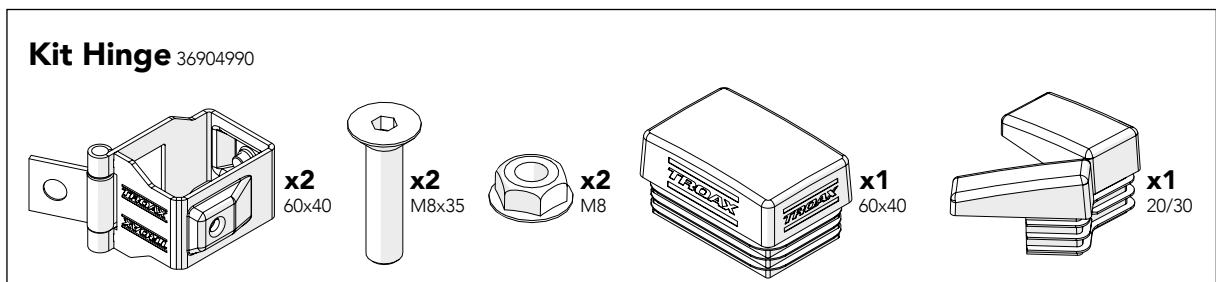
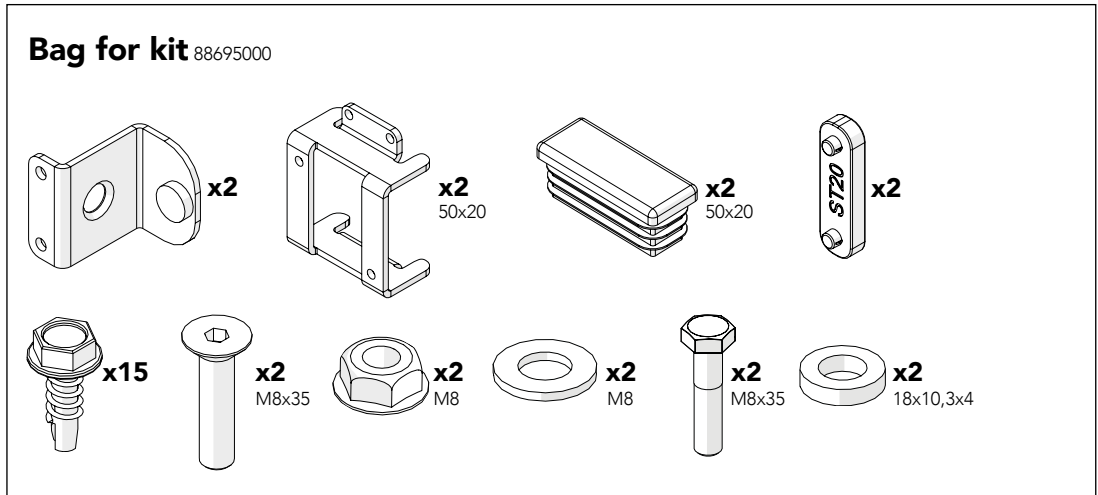


Art no: 88754551 ver. 007

Kit Hinge

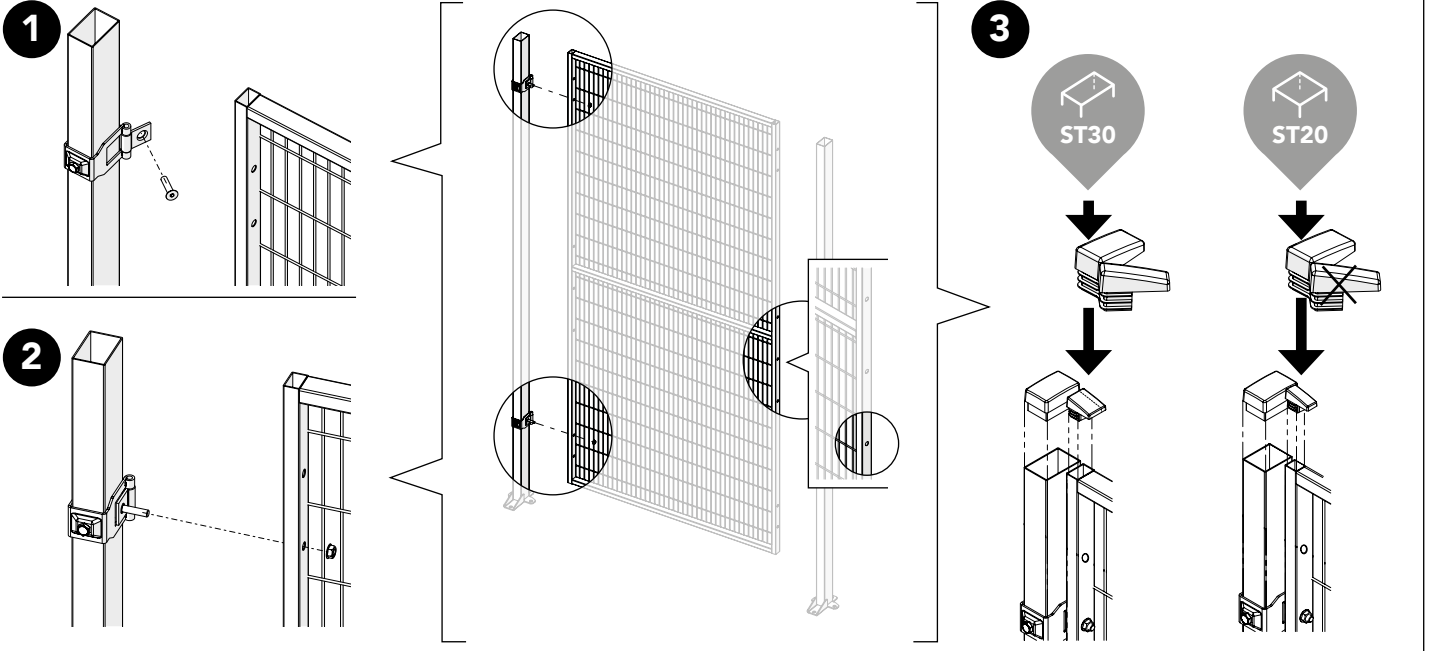
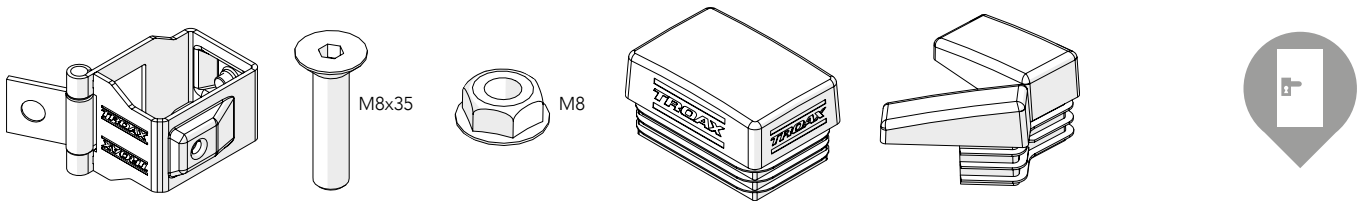


Bag for kit

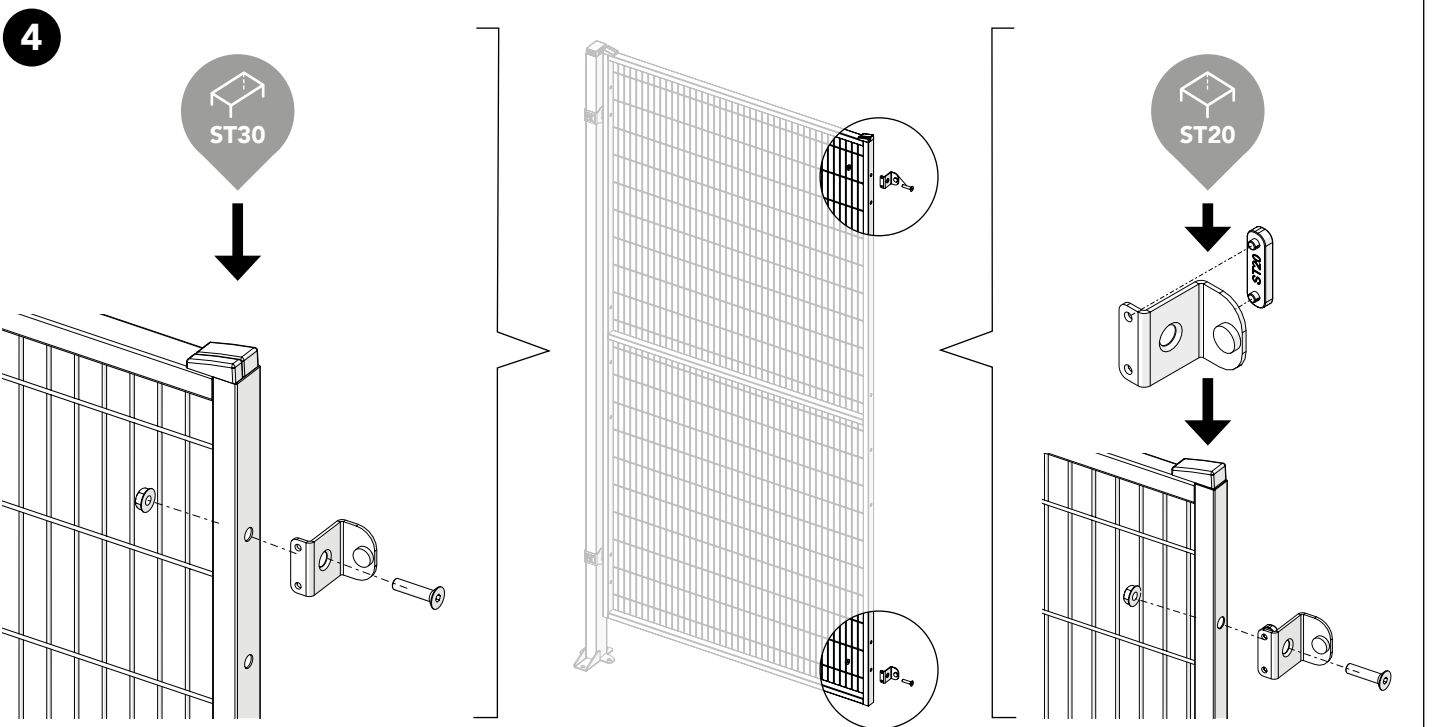
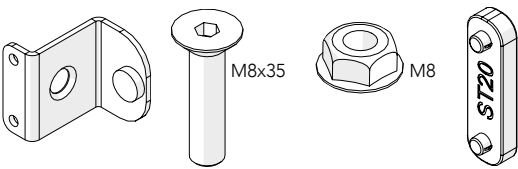


Art no: 38754551 ver: 007


Kit bracket SMF

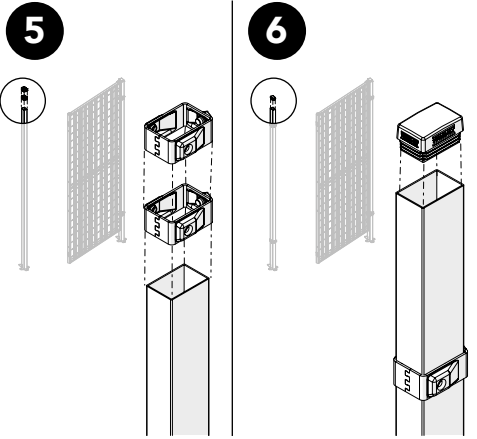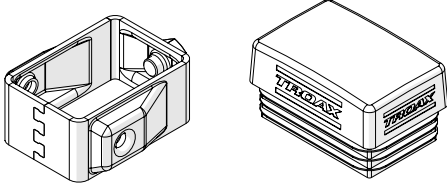

Bag for kit

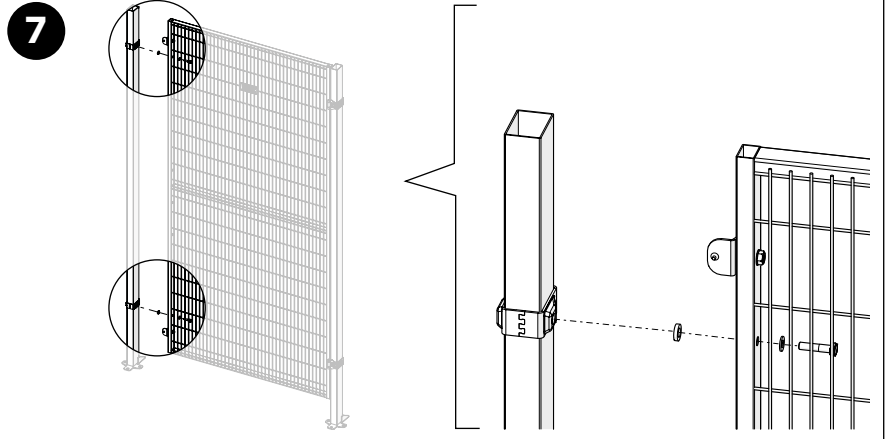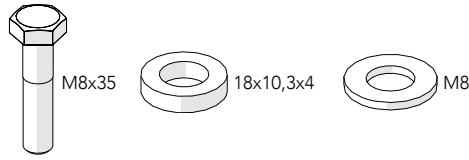









Bag for kit

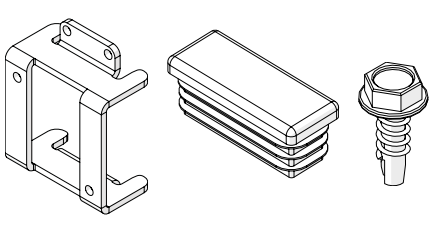


8 Door panel width

700	=	810
800	=	910
1000	=	1110
1200	=	1310
1500	=	1610

Door stay length

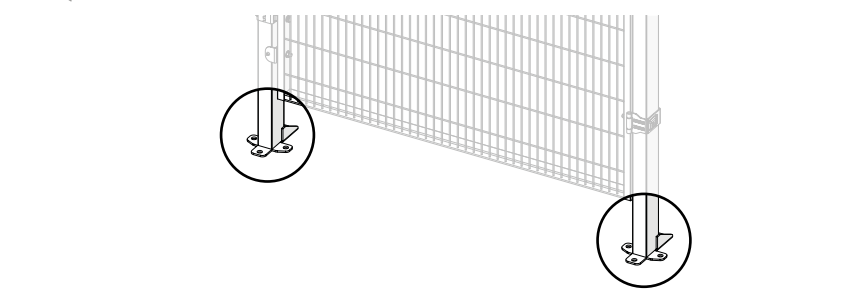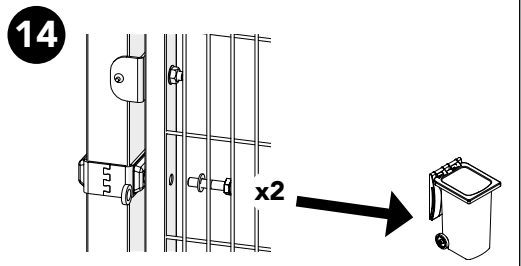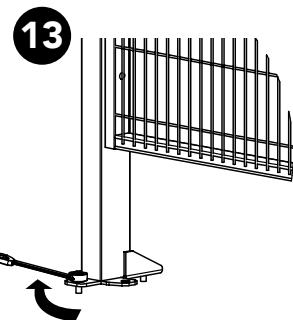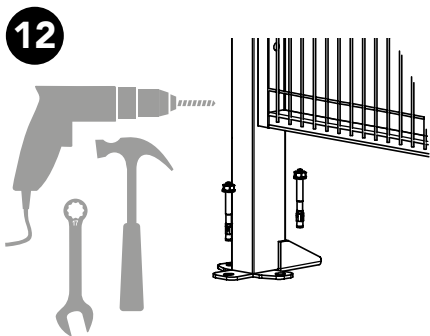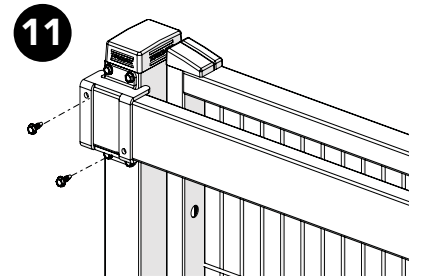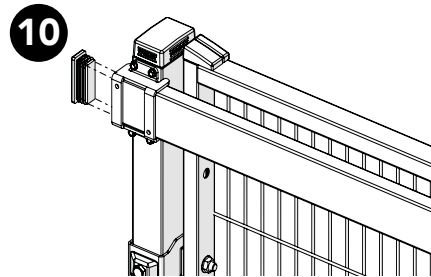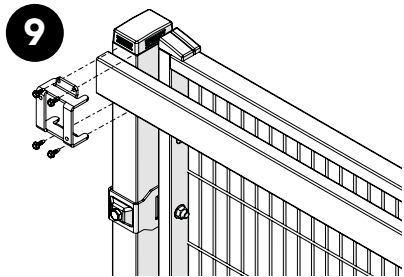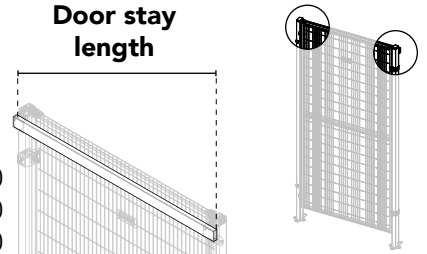

Troax sign

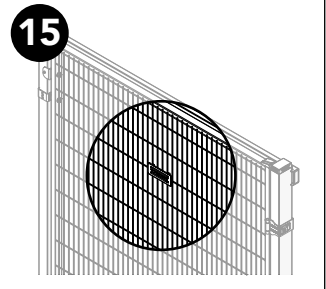

Art no: 88754511 ver. 007