




ASSEMBLY INSTRUCTION
– JUST FOLLOW ME

TELESCOPIC HINGED


KIT 36906275



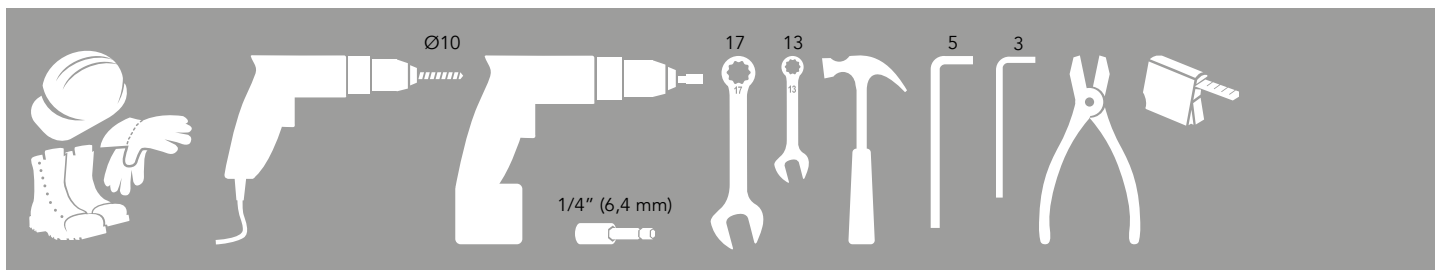


Kit Telescopic Hinged 36906275


Kit 6275 Telescopic Hinged 36906275

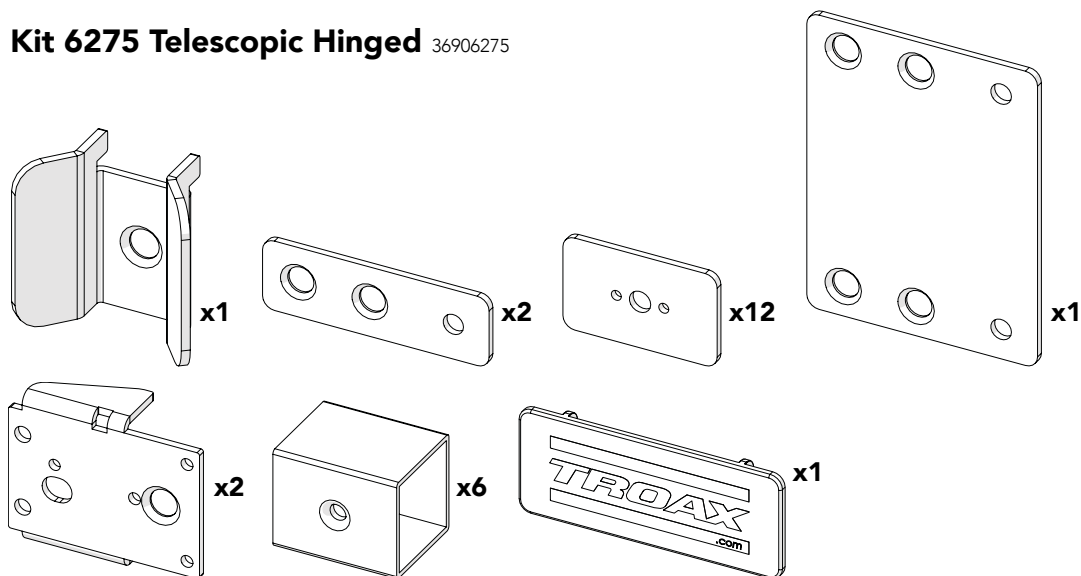


Bag For Kit 6275 88696275

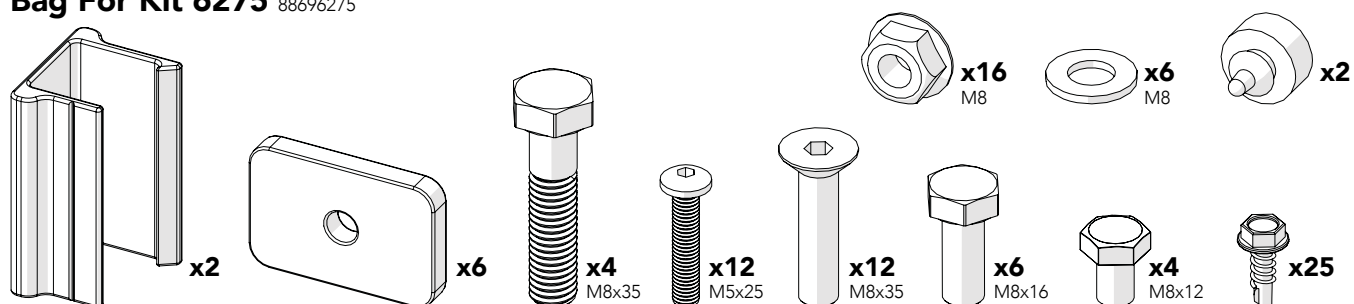



Kit Hinge Strong Fix 36908130

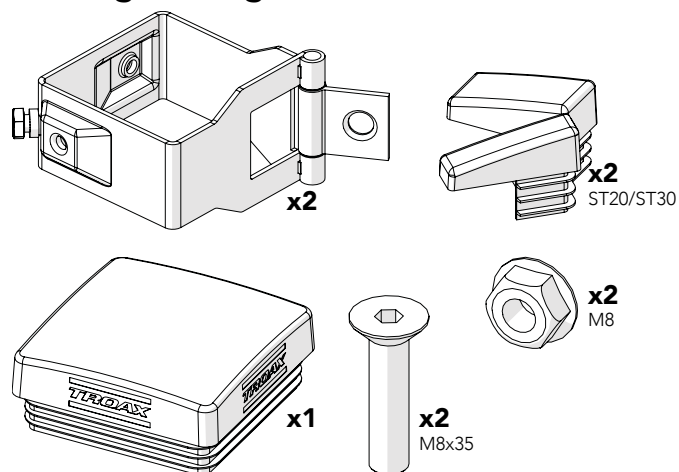



Kit Bracket Strong Fix 36700098

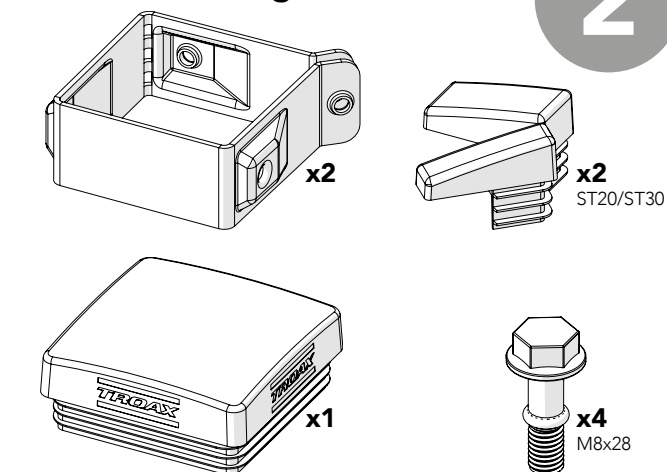




Kit Hinged Strong Fix

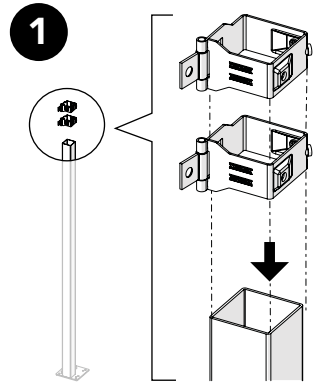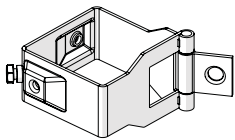



Kit Hinged Strong Fix

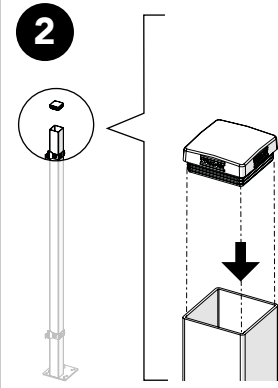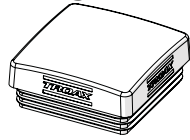




Kit Hinged Strong Fix

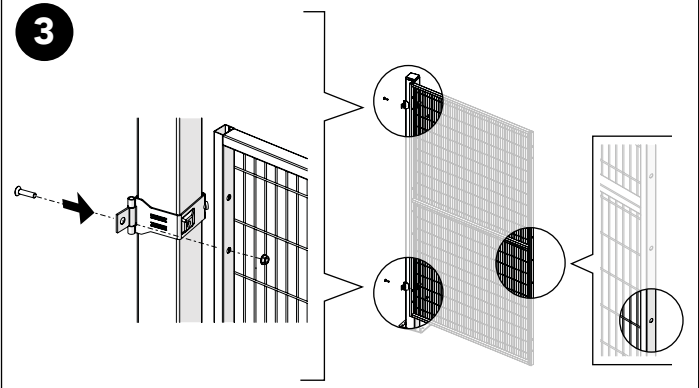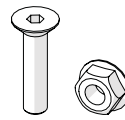


Kit Hinged Strong Fix

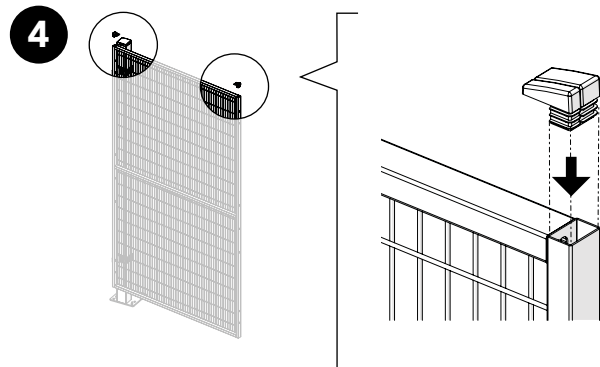


Bag For Kit 6275 + Kit 6275

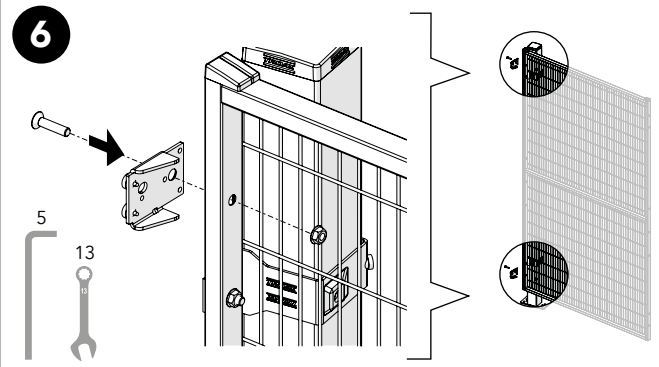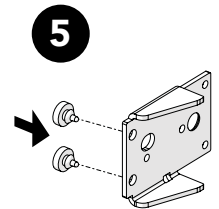

Kit 6275 + Bag For Kit 6275

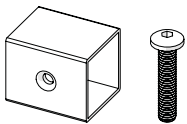

3

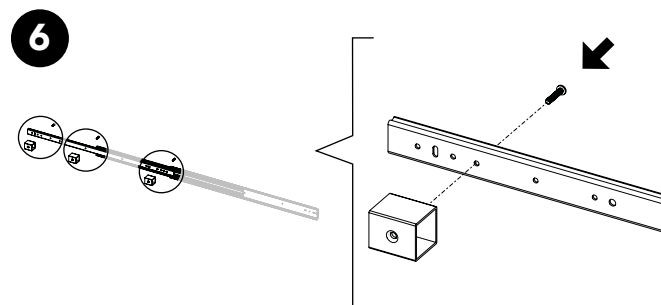


7

Hinged Door:	Telescopic Door:	X:
1000mm	800mm	184mm
1200mm	1000mm	184mm
1500mm	1200mm	284mm

Kit 6275 + Bag For Kit 6275




3




ST30

ST20


8

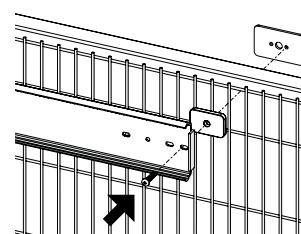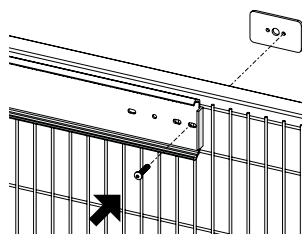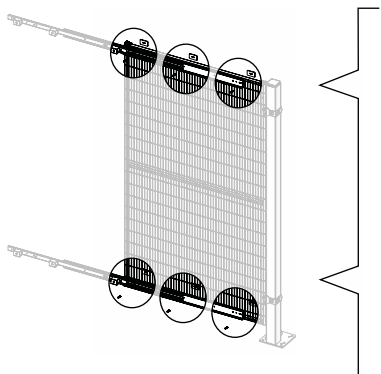


Kit Bracket Strong Fix



9

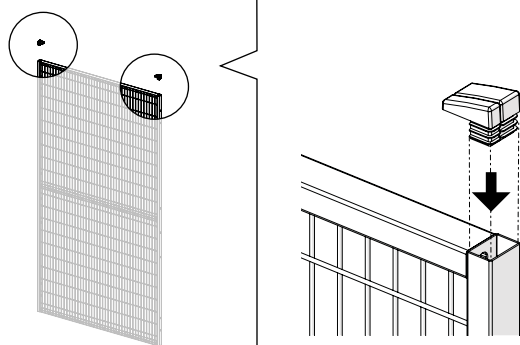


Bag for kit 6275

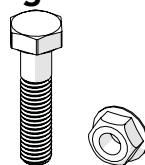


13



10

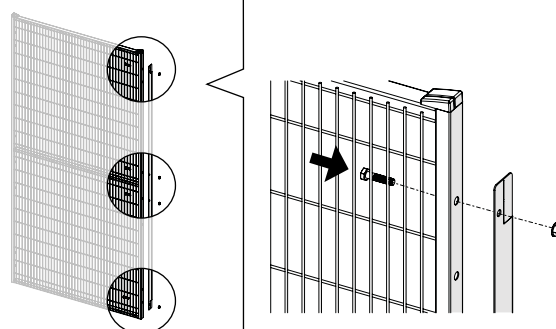


Bag For Kit 6275 + Kit 6275




13




11

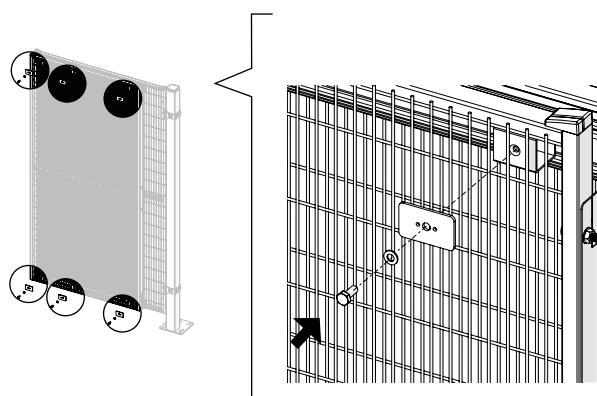



Kit Bracket Strong Fix

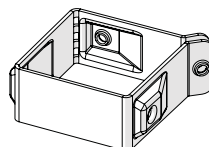



12

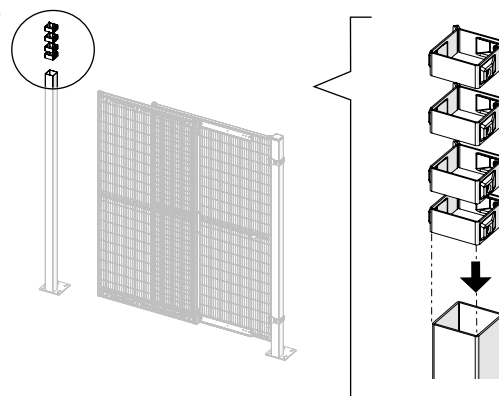




Kit Bracket Strong Fix

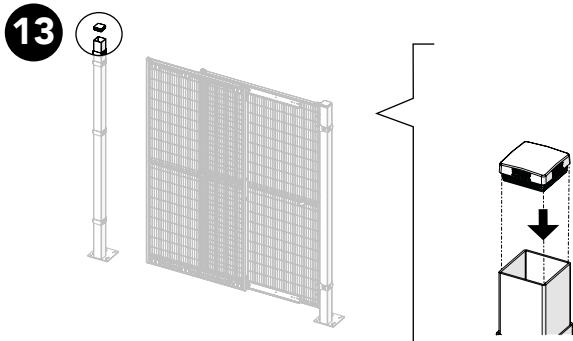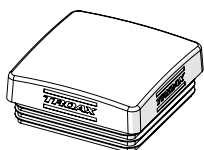



Bag for Kit 6275 + Kit 6275

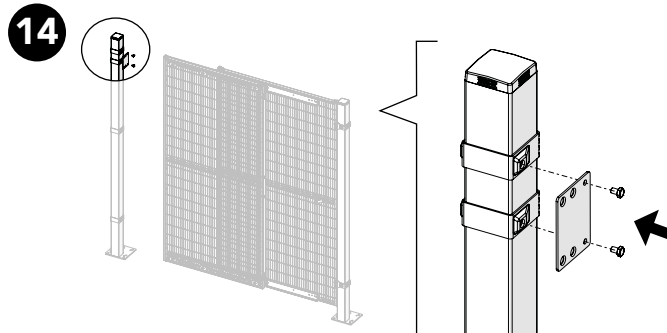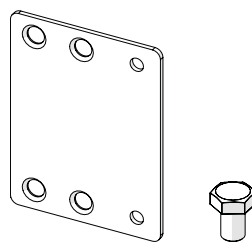




Bag for Kit 6275 + Kit 6275

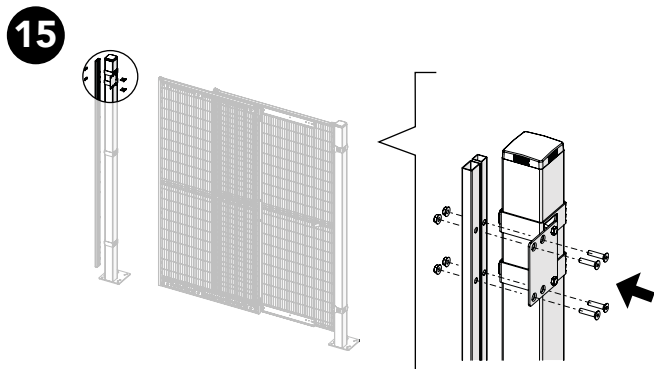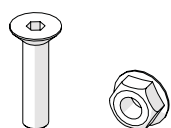



Bag for Kit 6275

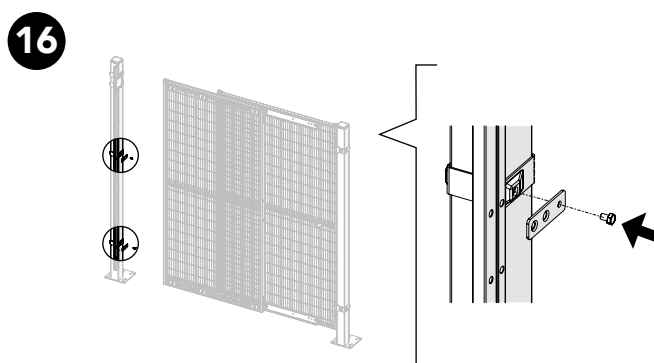





Bag for Kit 6275

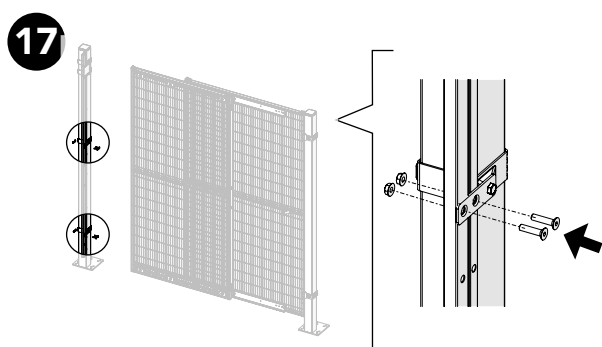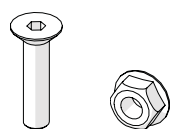


Bag for Kit 6275 + Kit 6275

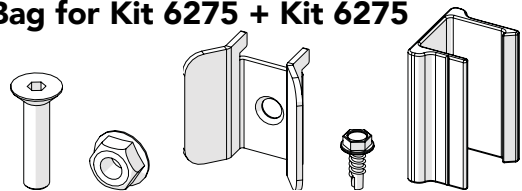


18

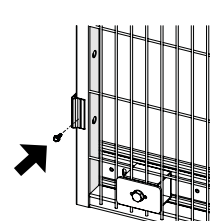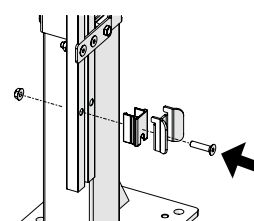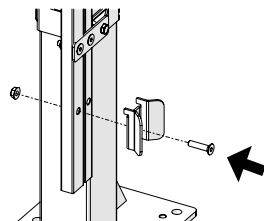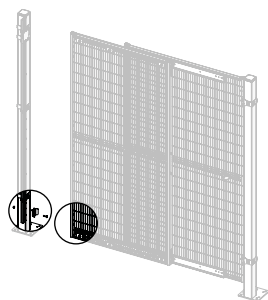



Troax Sign



19

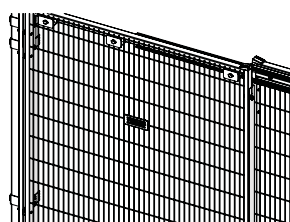

20

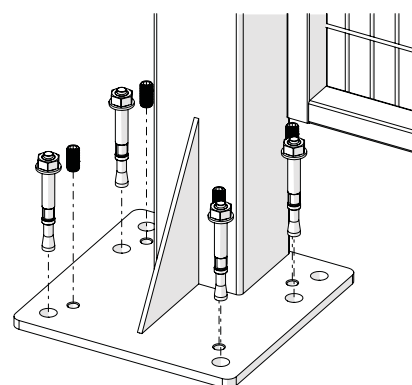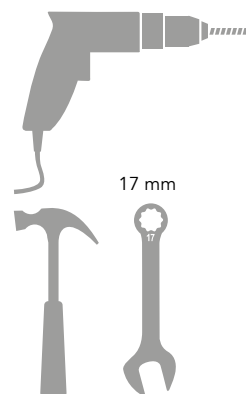

Art no: 887/54535 ver. 004