


SAFE FIX 80X80 BRACKET

Safe Fix 80x80 bracket is used together with the 80x80 post for a very strong and solid installation. Two panels are bolted together with the bracket in the middle. With this Partitioning system, the panels normally are placed directly to the floor and the 80x80 posts are always located behind the panels. So, for example, when using steel sheet panel UR SP, there will be no gaps in the wall.

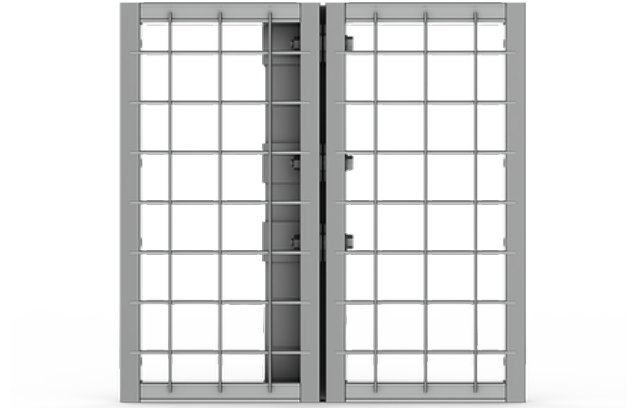

FACTS

ART. NO	COMPONENTS
36700279	Bracket 80x80 post
89050044	Bolt M8x55 Flange
89050525	Nut M8 (knurled collar)

COMBINE WITH



POST 80X80 WP



POST 80X80 WP
NEW



TUBE 80X80



PANEL UX450
PARTITIONING
SYSTEM



PANEL UR350
PARTITIONING
SYSTEM

IMAGES

