


ASSEMBLY INSTRUCTION  
– JUST FOLLOW ME

# HINGED DOOR SAFE ESCAPE LOCK PANIC BAR







KIT 36907970






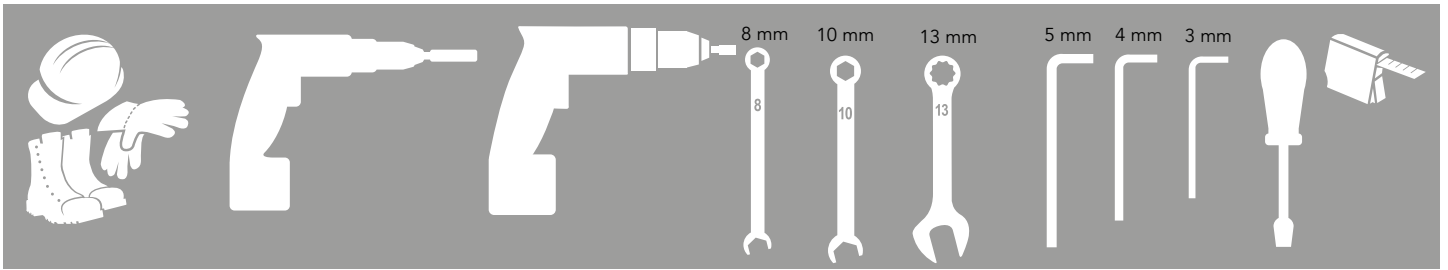


# Hinged door Safe Escape Lock with Panic Bar

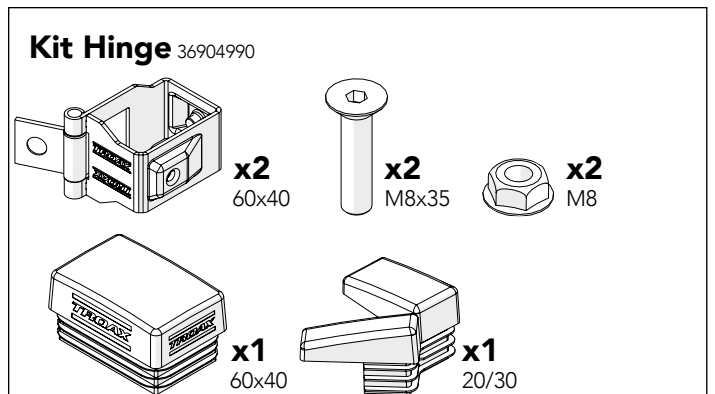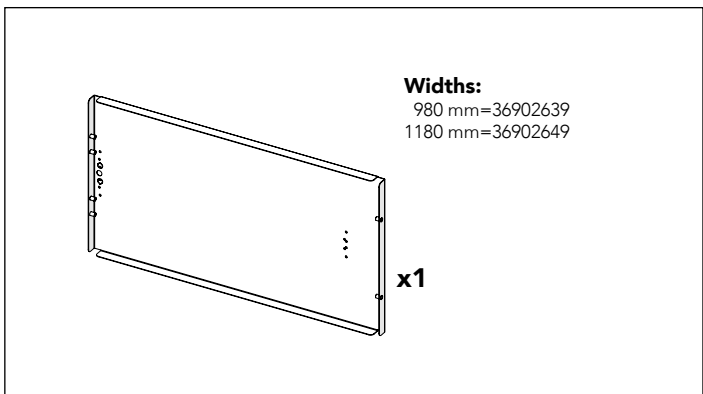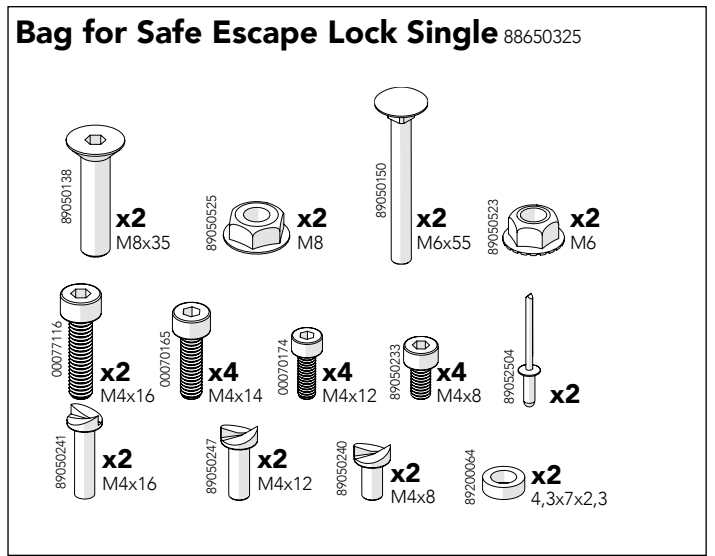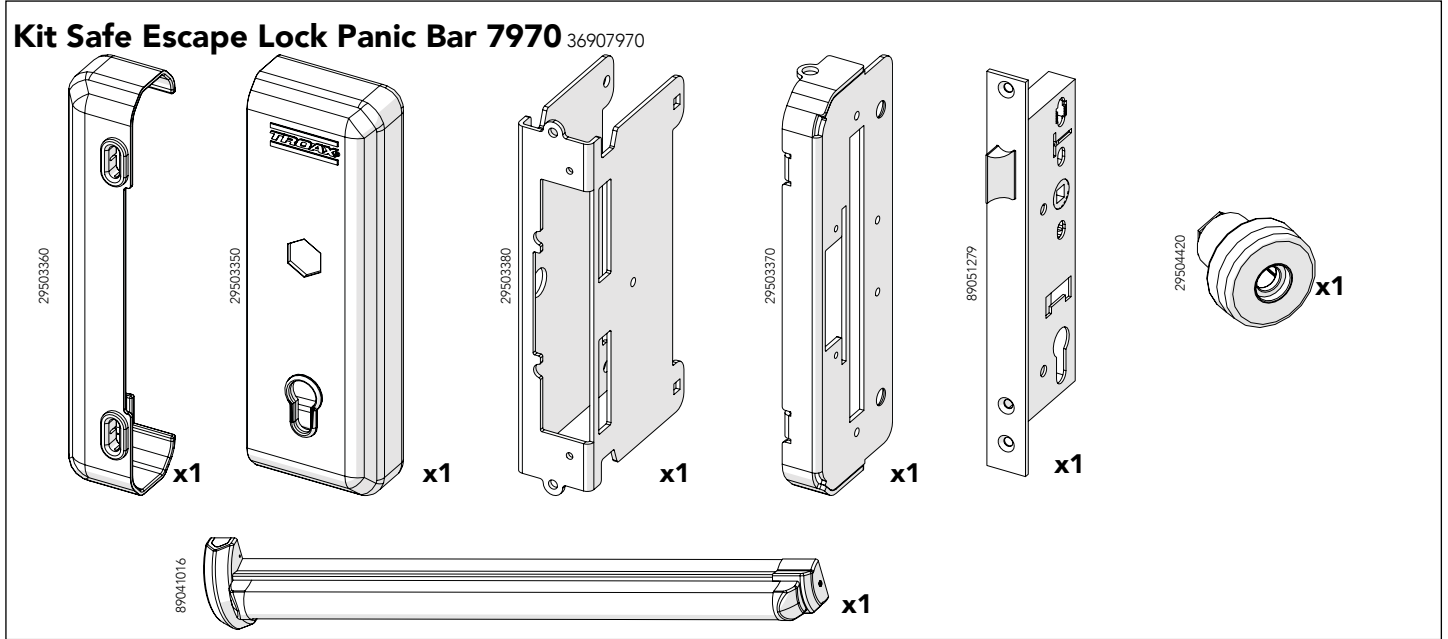





### Kit Hinge

1

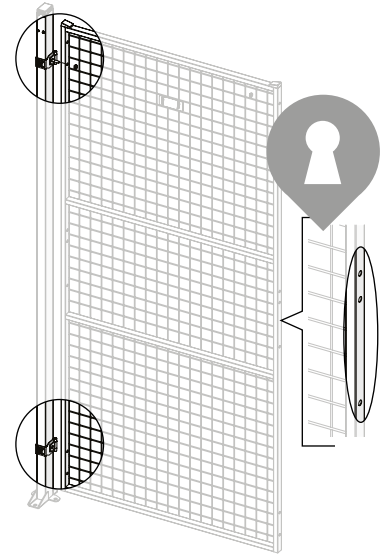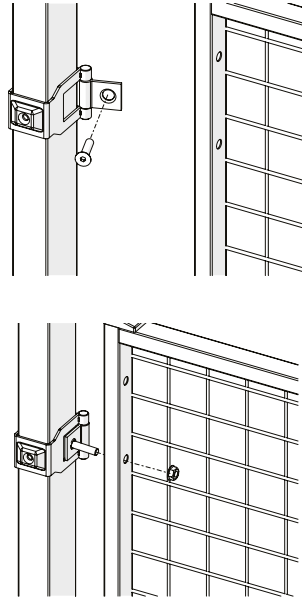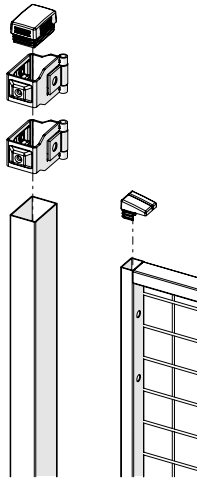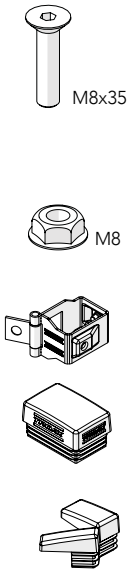

### Bag for kit



2

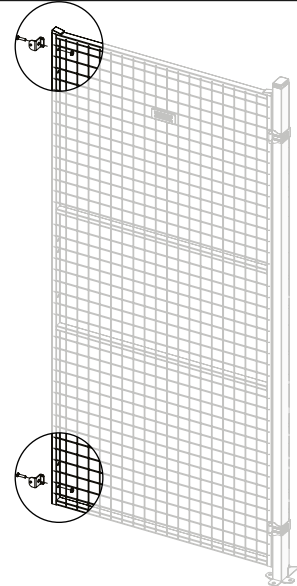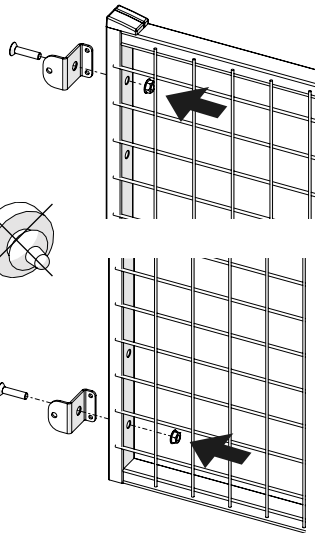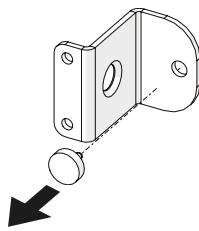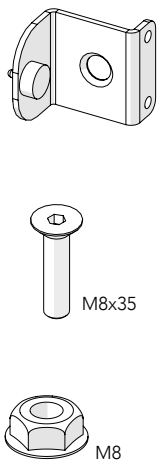


Art no: 88737970 ver:002

### Kit Bracket SmF

3

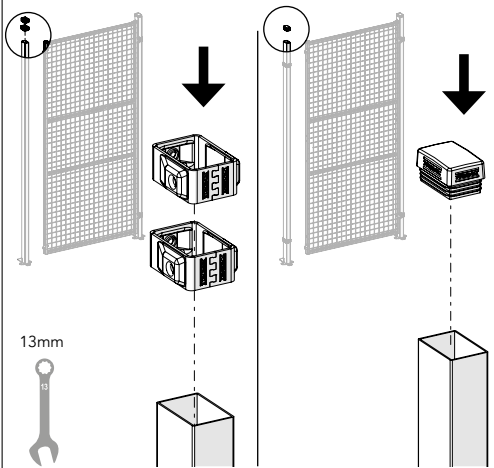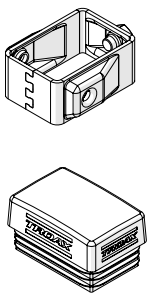


### Kit Bracket SmF

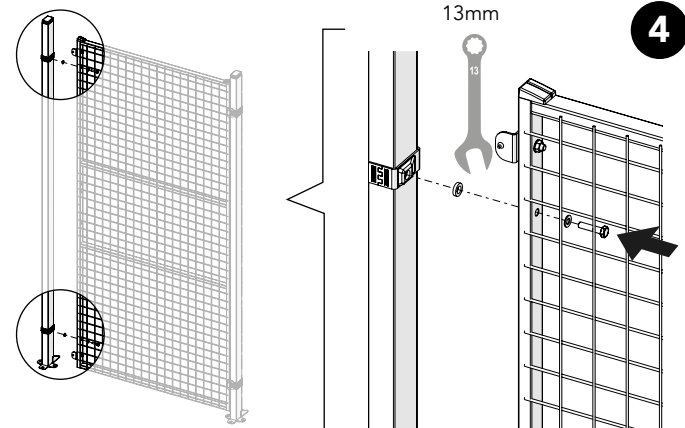


4

**Bag for kit**

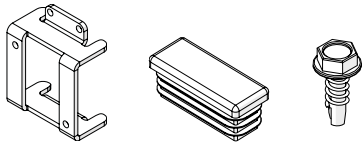




**5**

**Door panel width**

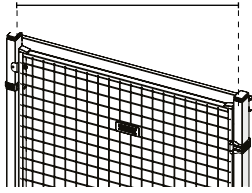


980 = 1110  
1180 = 1310

**Door stay length**

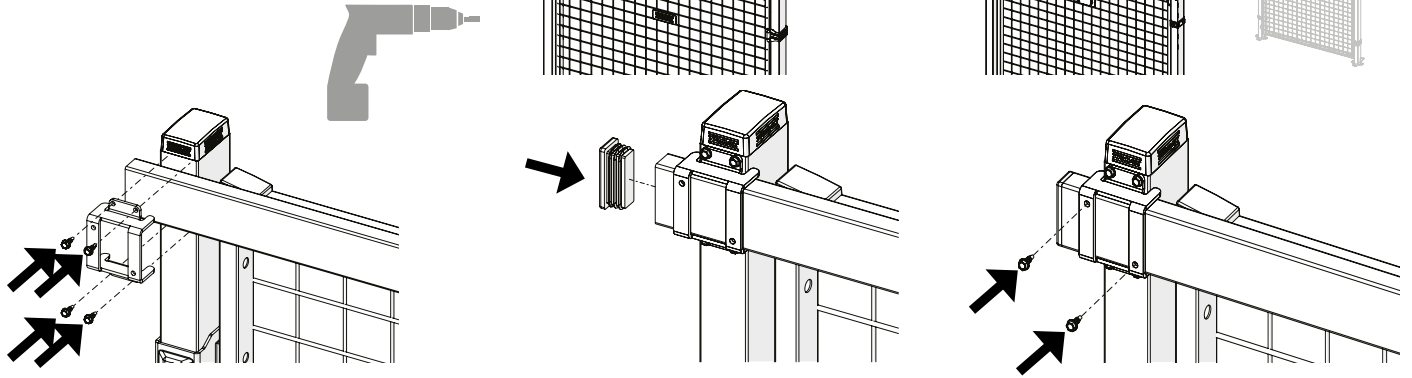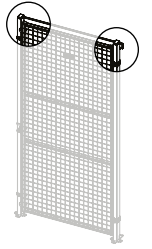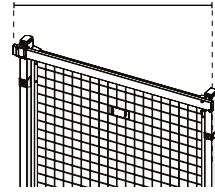


**6**





Max 30 Nm



17 mm

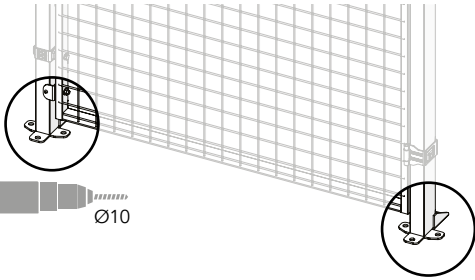


**7**



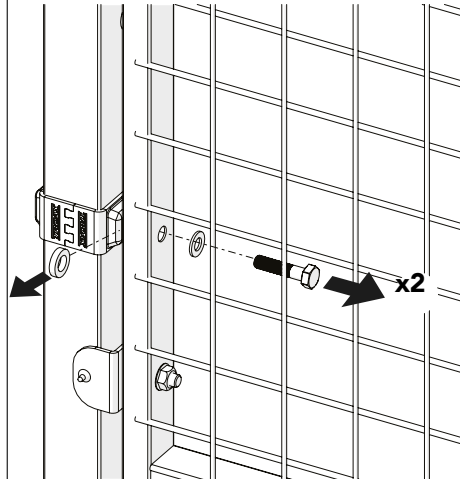





Art no: 88757970 ver.002








**8**

**Kit 7970**

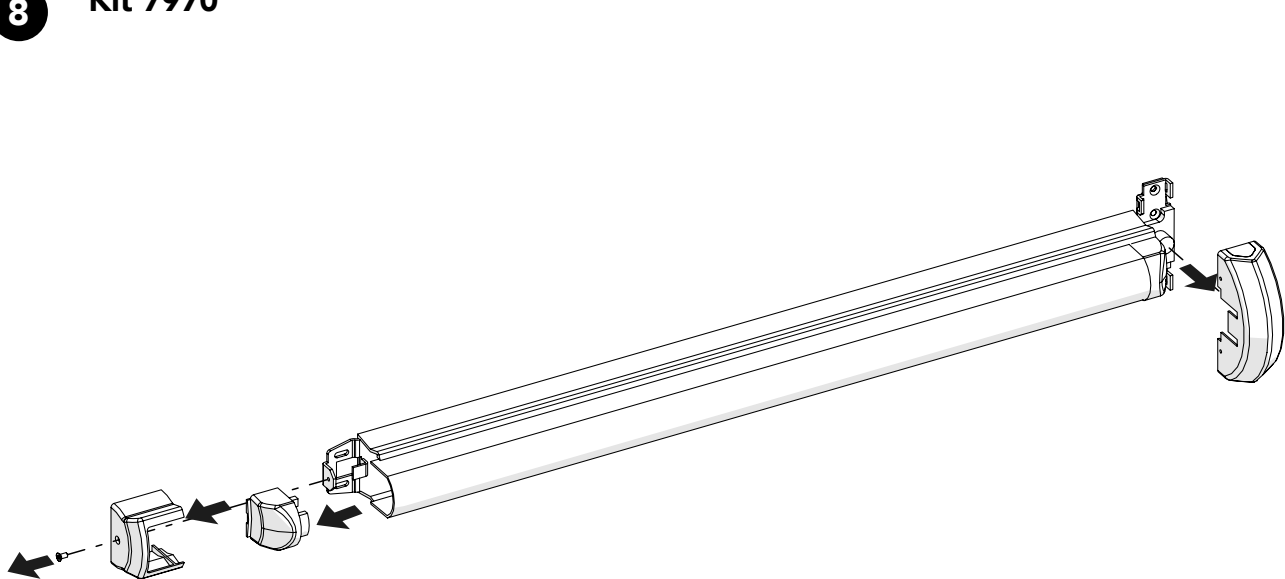

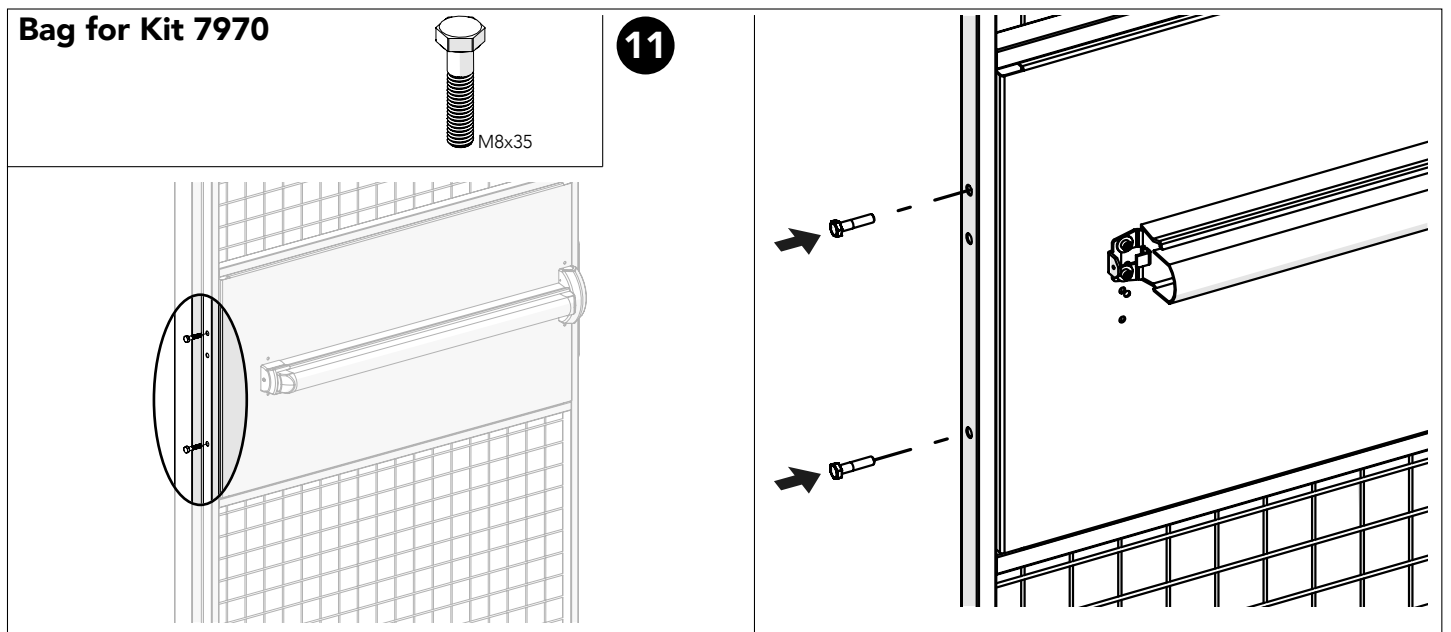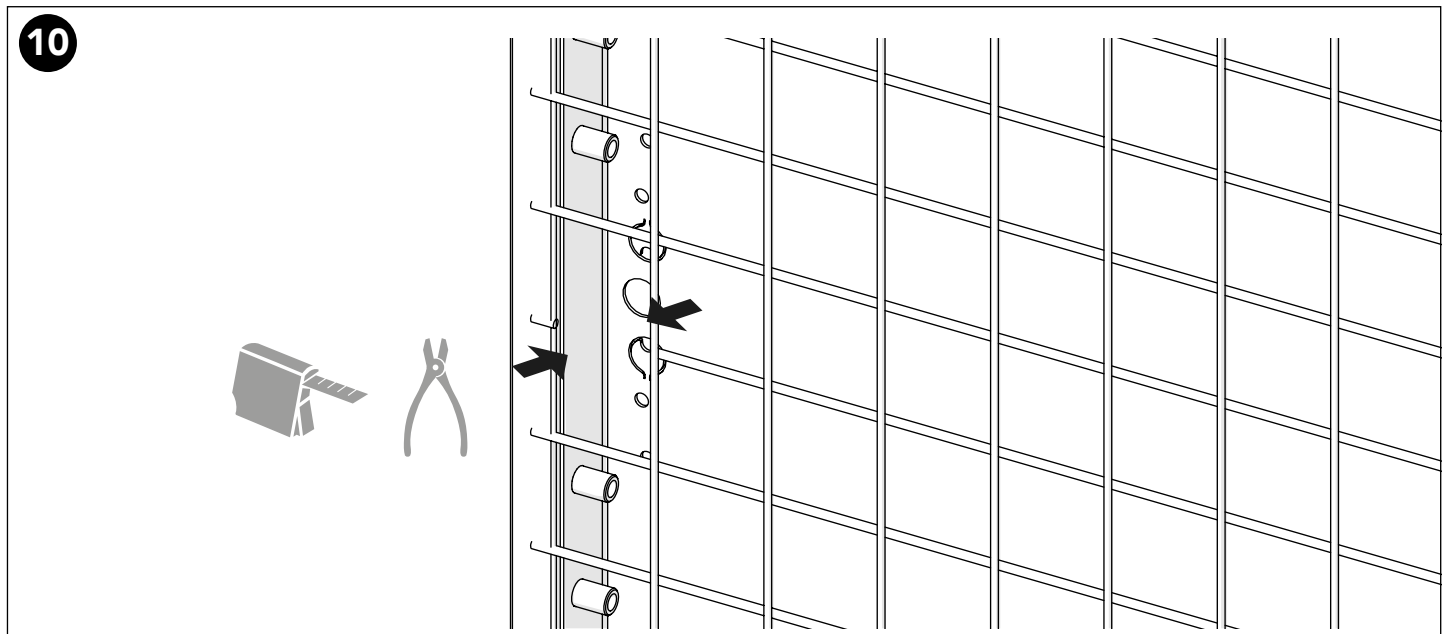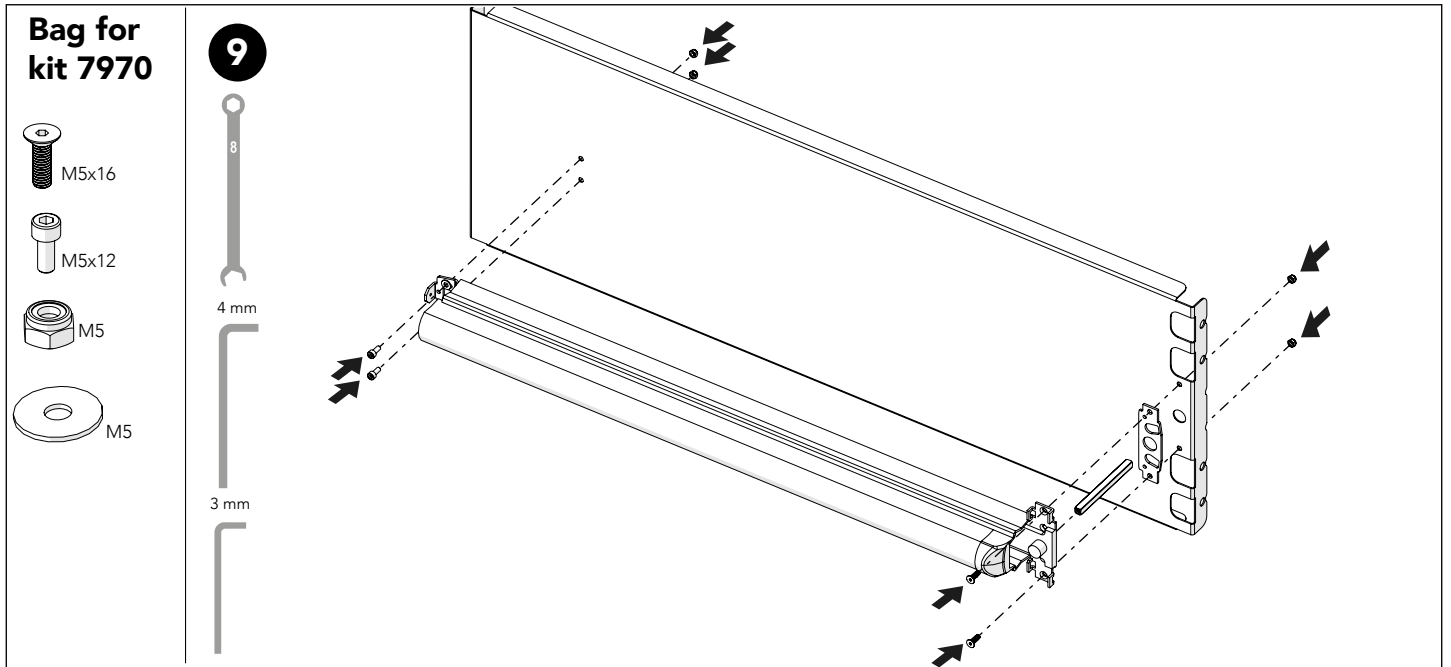

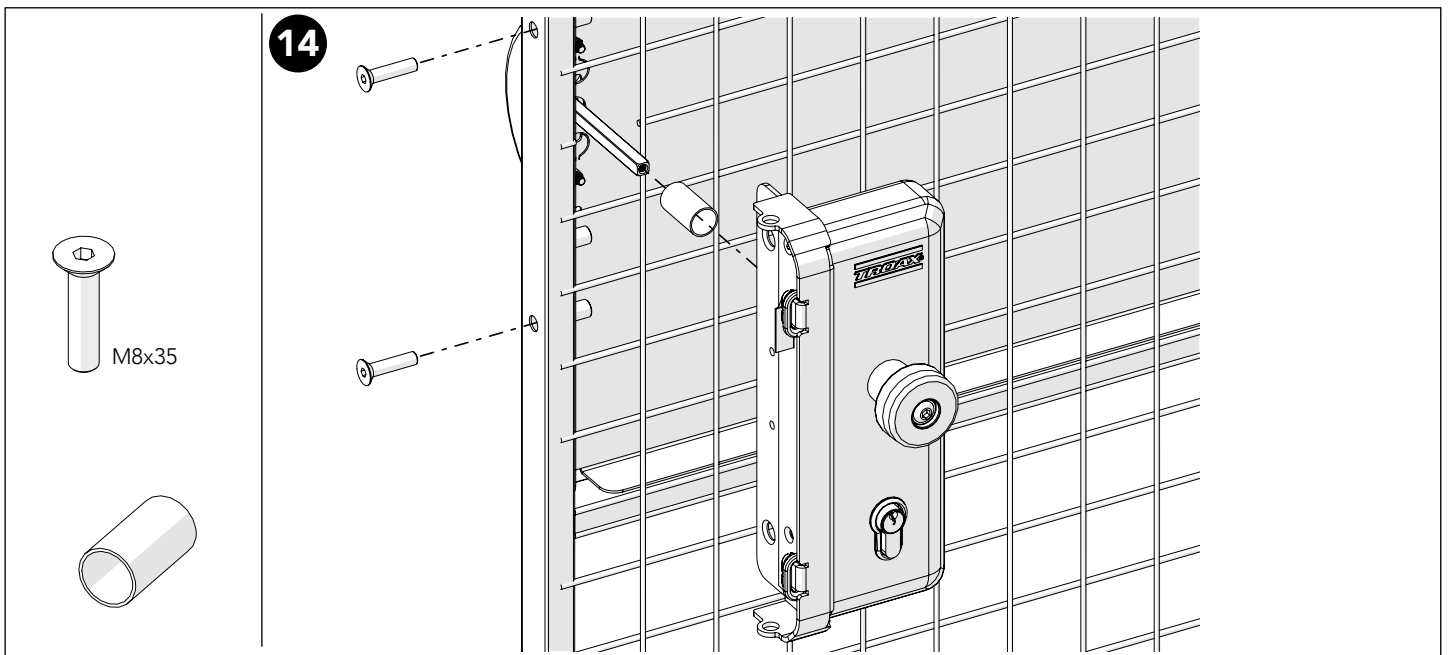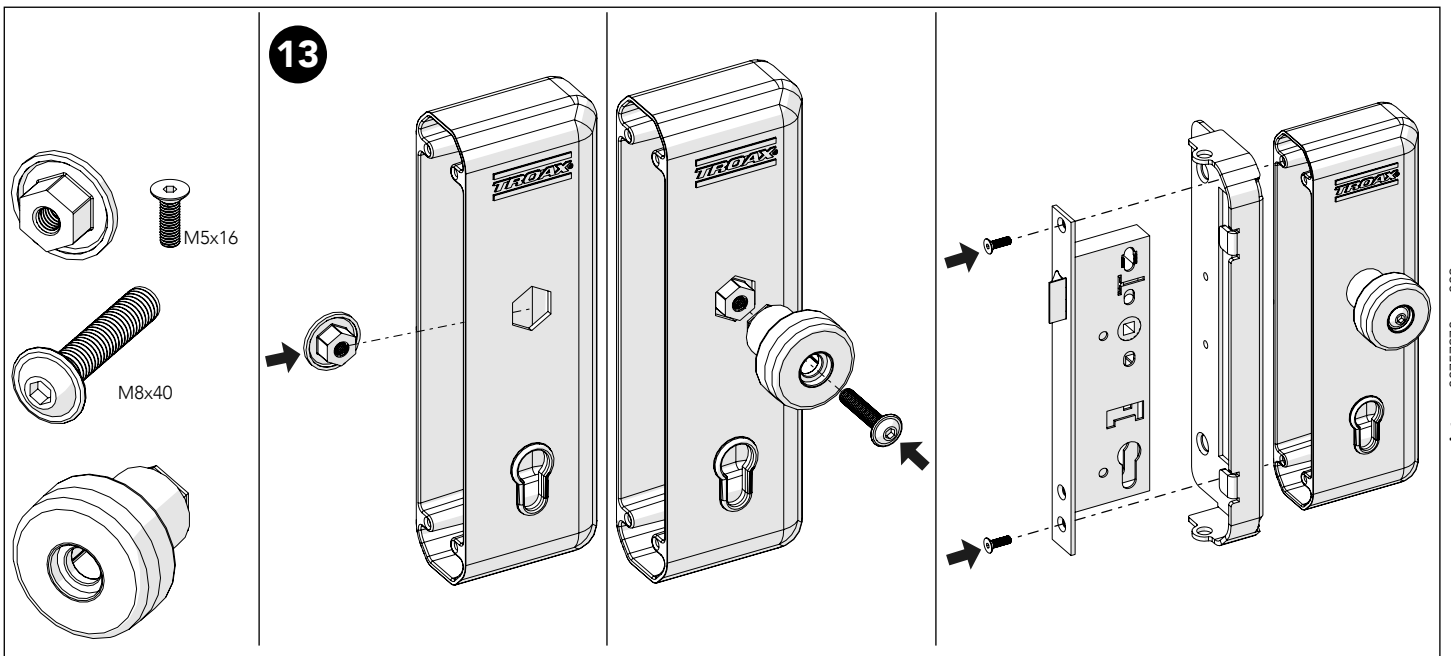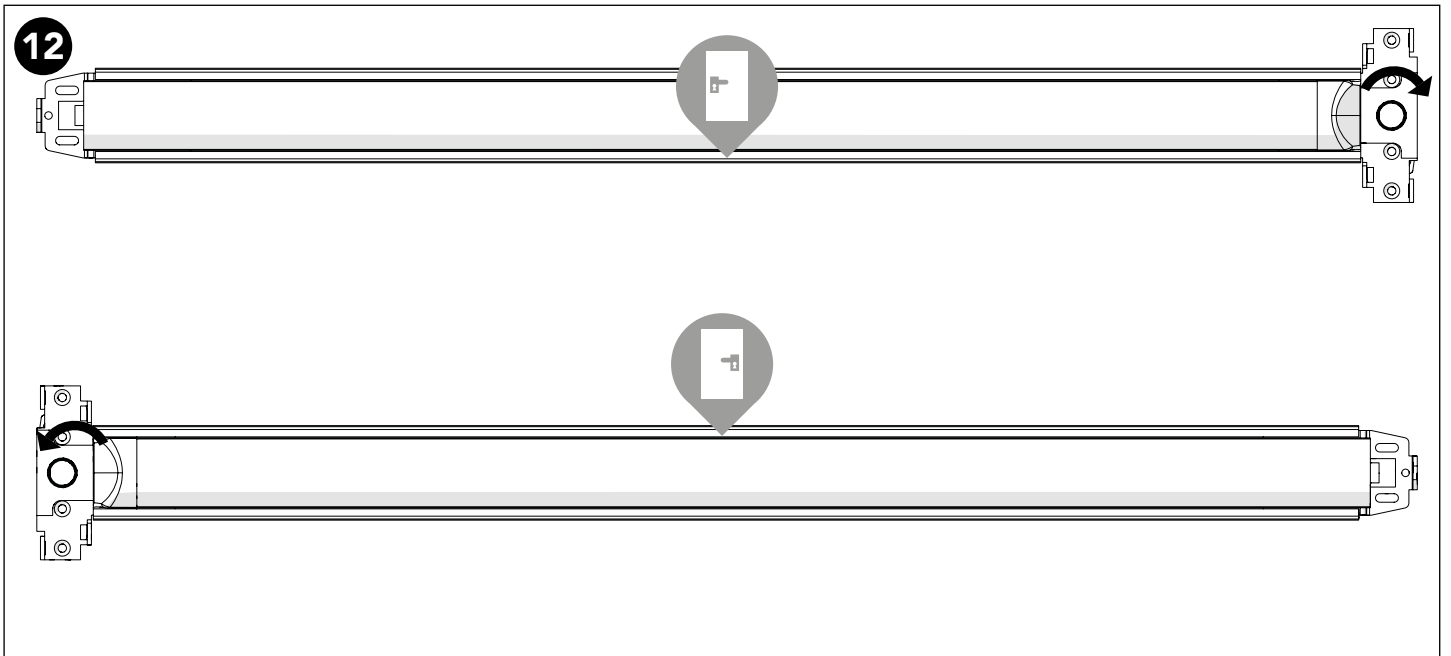

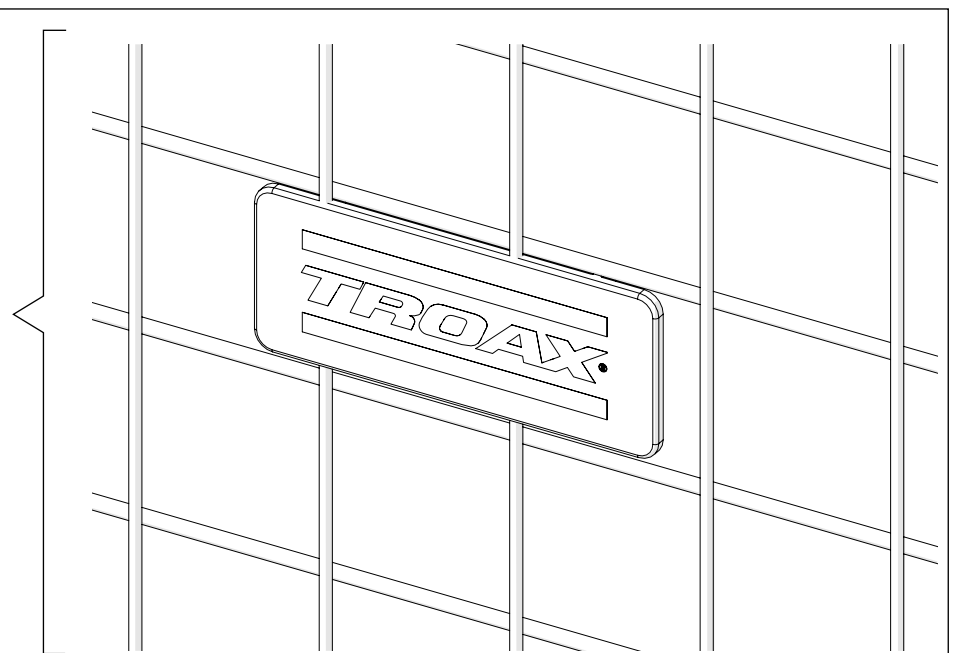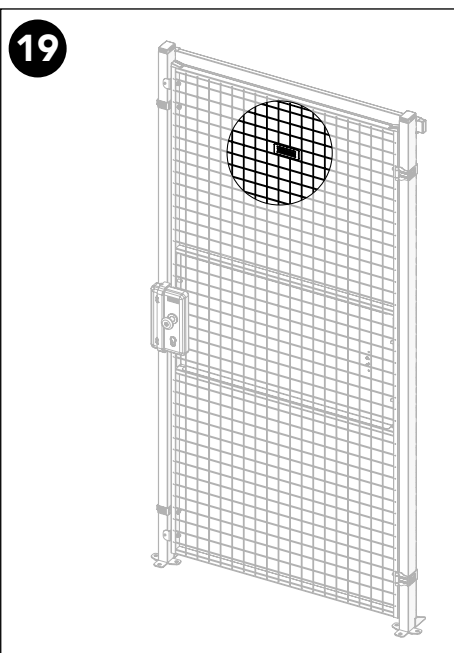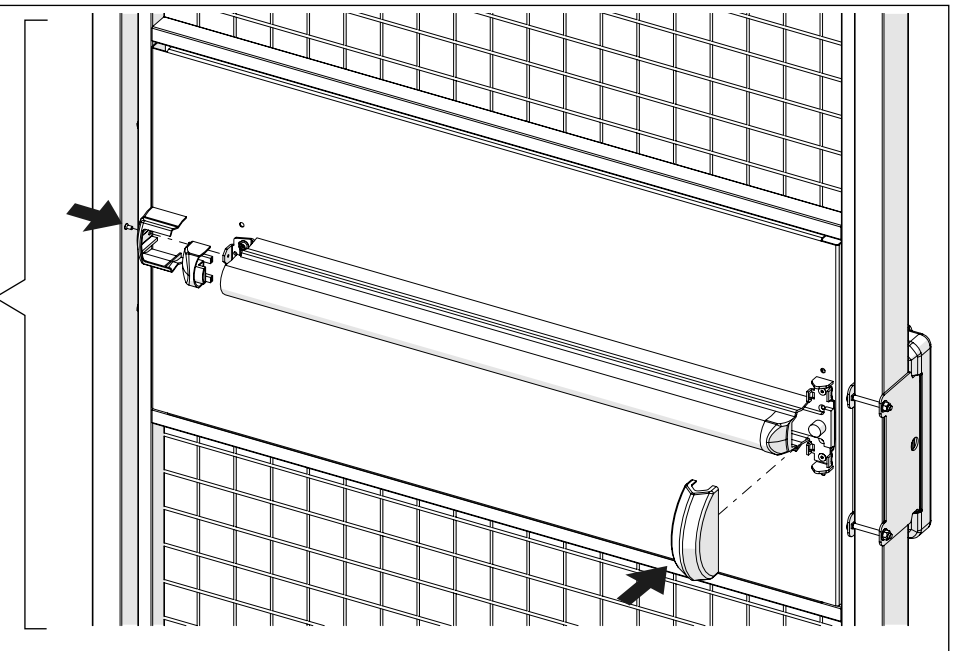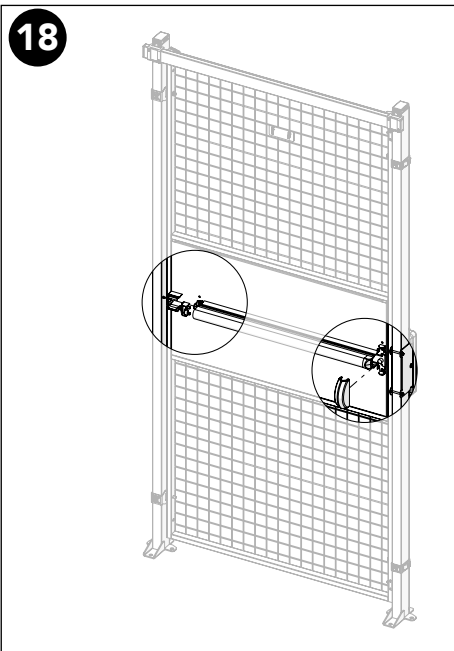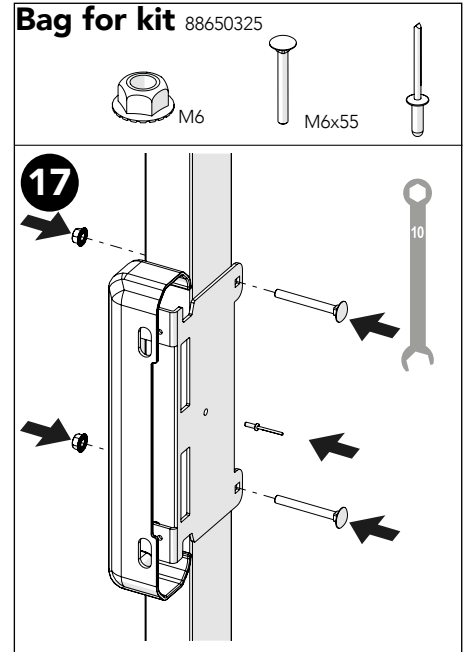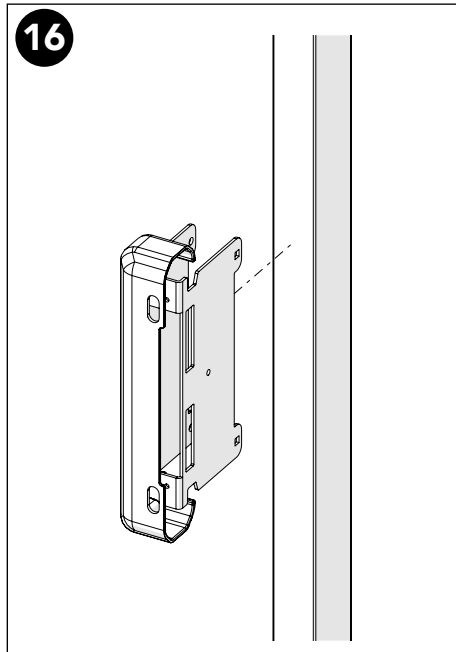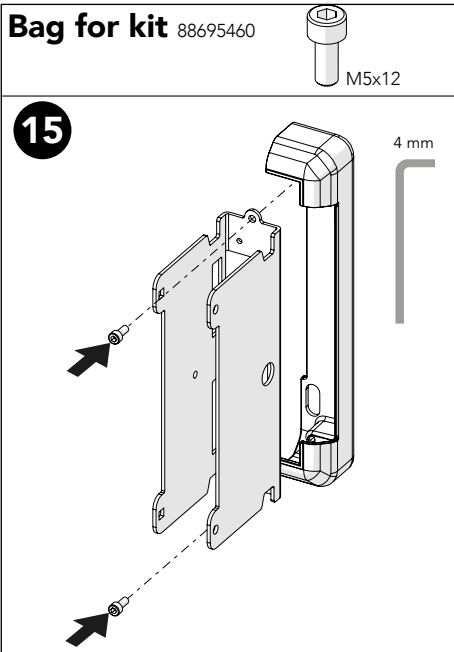

Art no: 88737970 ver:002