

FIXINGS

QuickGuard is assembled with a clever screw-lock system. All brackets are supplied pre-mounted with fixing, screws and nuts. No holes needs to be drilled in the profiles and all cuts are made straight. This makes the assembly and any modification very easy. Use the L-brackets for corners, end posts and door blades, and the T-bracket for connecting two horizontal profiles with a post. Press the bracket against the profile, loosen the screw by turning it anti-clockwise and then tighten the screw clockwise again until it's fixed.

The floor brackets are made of aluminium and in two versions, one for walls and one for doors. These are also easily attached to the aluminium profiles as the bolts are pre-mounted on the brackets.



FACTS

ART. NO	COMPONENTS
15901000	L-bracket Premounted (32B-K 2TLA040030R0700)
15901010	T-bracket Premounted (33B-K 2TLA040030R0800)
15901020	Angle Bracket Countersunk (31A1-K 2TLA040030R0400)
15901030	Angle Bracket 2 Holes (31B-K 2TLA040030R1300)
15901040	I-Bracket (34B-K 2TLA040030R1500)
15901050	Angle Bracket Large (30B-K1 2TLA040030R1100)
15901060	Angle Bracket 45 Deg (40 2TLA042021R5600)
15901070	Angle Bracket 20 Deg R (45-K1 2TLA040030R1600)
15901080	Angle Bracket 20 Deg L (45-K2 2TLA040030R1700)
15901090	Angle Bracket 70 Deg (44-K 2TLA040030R1800)
15902000	Floor Bracket Alu (39-K 2TLA040030R1400)
15902010	Floor Bracket Alu (30B-K 2TLA040030R0600)
15902020	Floor Bracket Seel A4488A (36-K1 2TLA040030R0900)
15902030	Floor Bracket Seel A44A (36-K2 2TLA040030R1000)
15902040	U-bracket Premounted (43 2TLA042020R3100)




FIXINGS

MACHINE GUARD

ART. NO	COMPONENTS
15902050	L-bracket Special (42 2TLA042020R3200)

COMBINE WITH

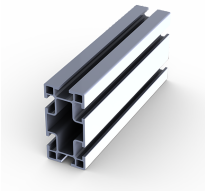

ALUMINIUM
PROFILES



MESH INFILLS



POLYCARBONATE
INFILL

IMAGES

