





ASSEMBLY INSTRUCTION
– JUST FOLLOW ME

HINGED DOOR SMF EC LOCK PANIC BAR


KIT 36907960

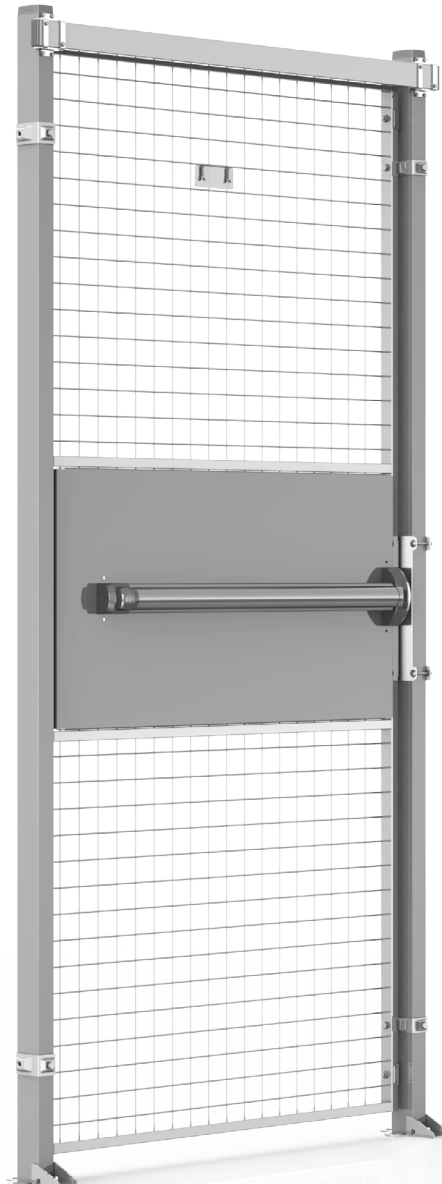




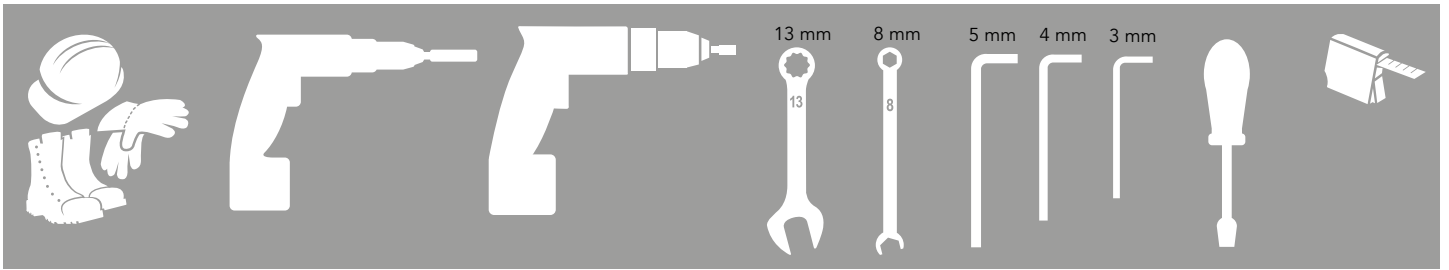


Hinged door SmF EC Lock with Panic Bar

Kit 7960 WP SmF EC Lock Panic Bar 36907960




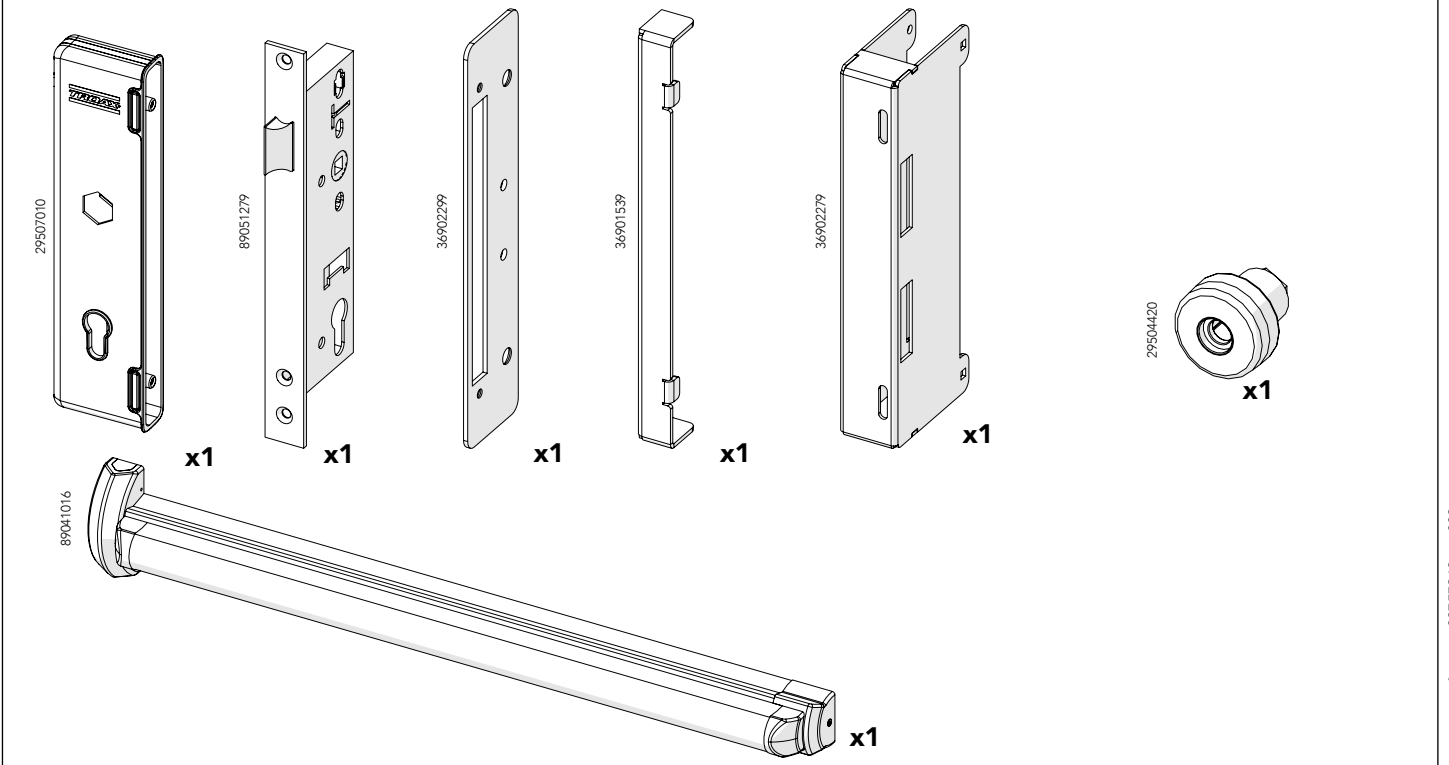


Art no: 88757960 ver.003

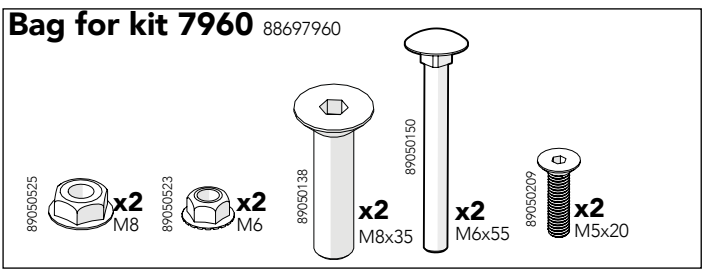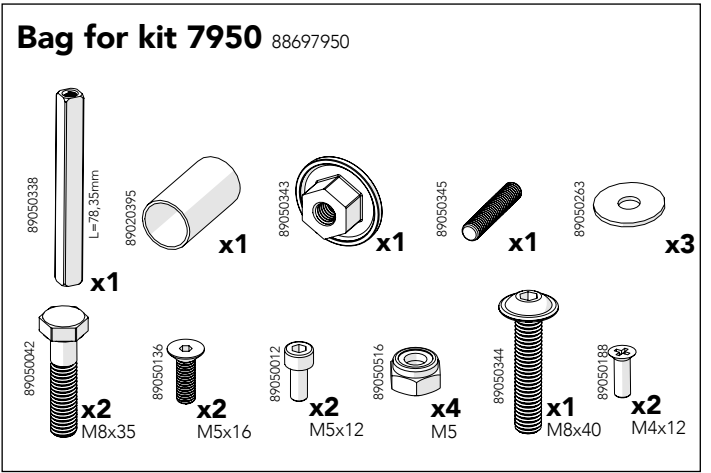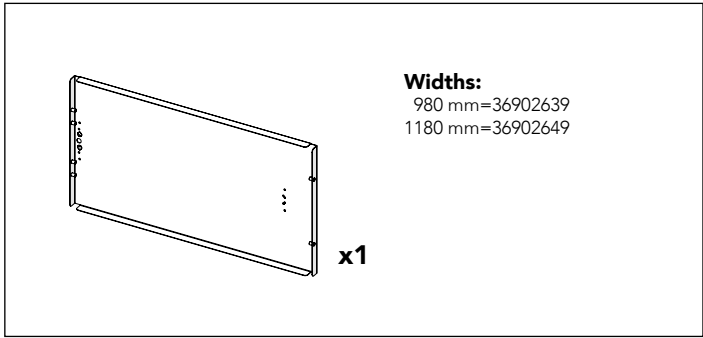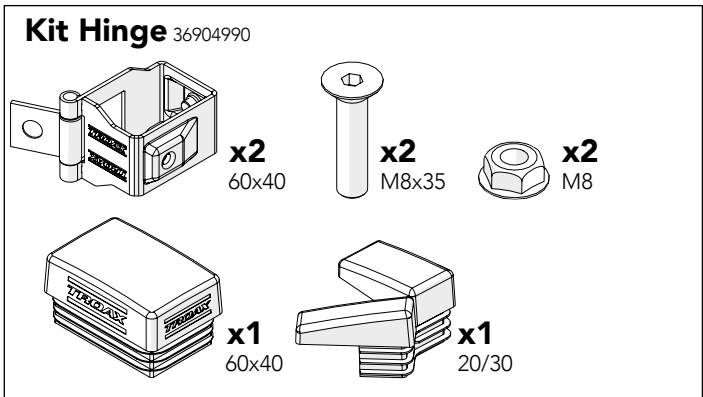




Kit Hinge

1

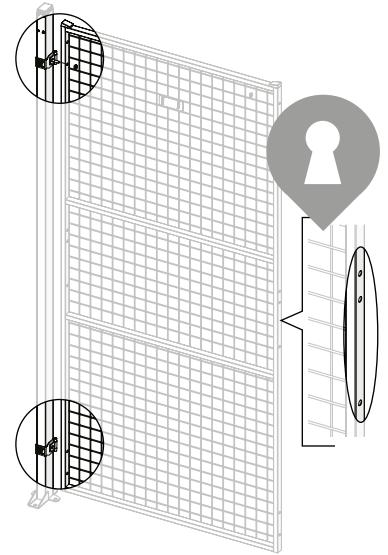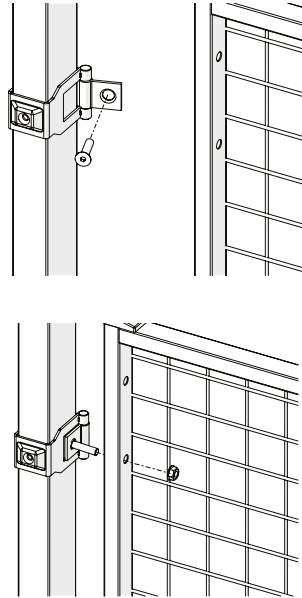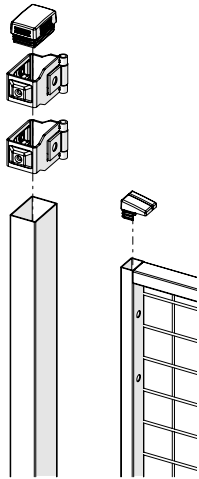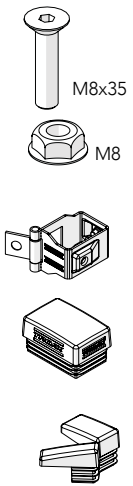

Bag for kit



2

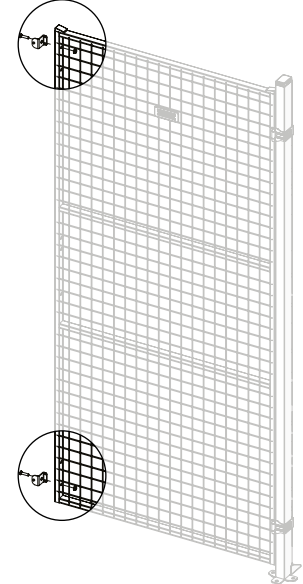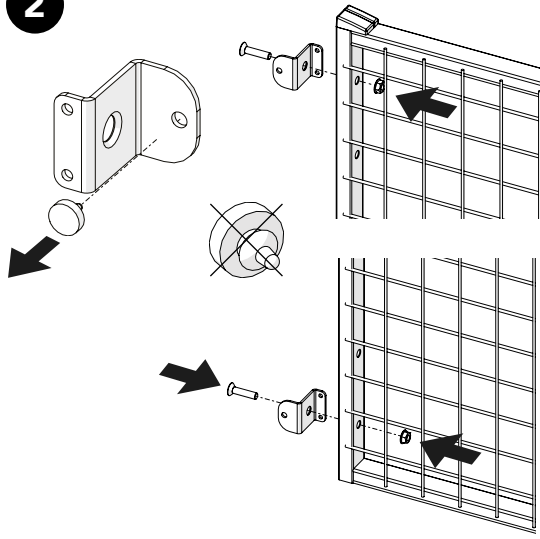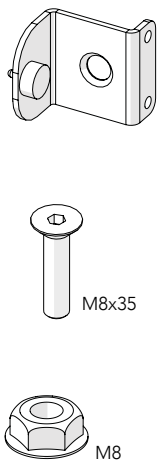


Art no: 88737960 ver:003

Kit Bracket SmF

3

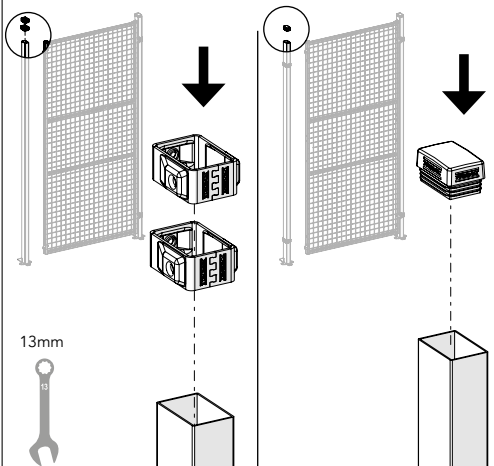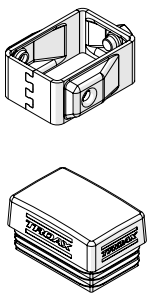


Kit Bracket SmF

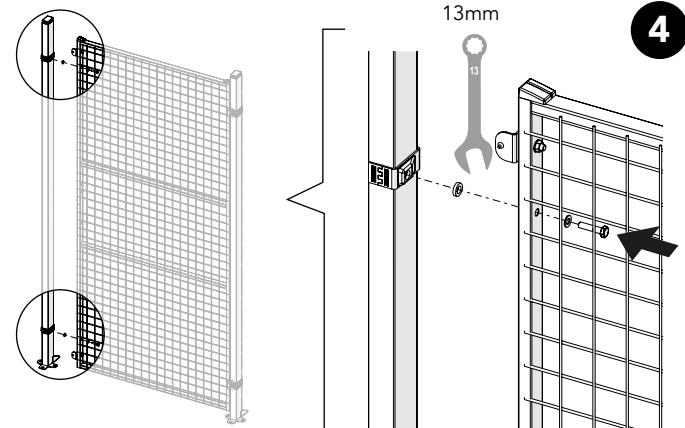


4

Bag for kit

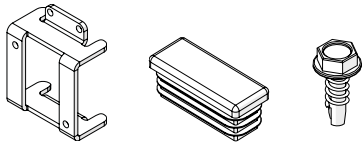






5

Door panel width

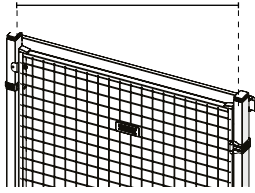


980 = 1110
1180 = 1310


Door stay length

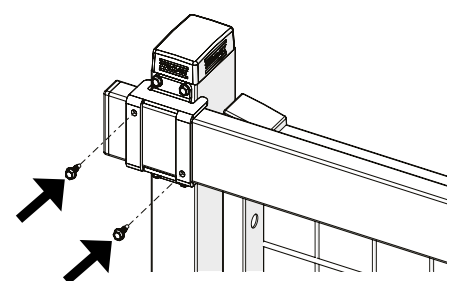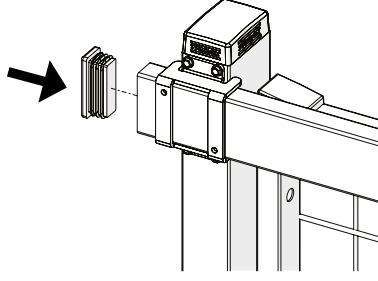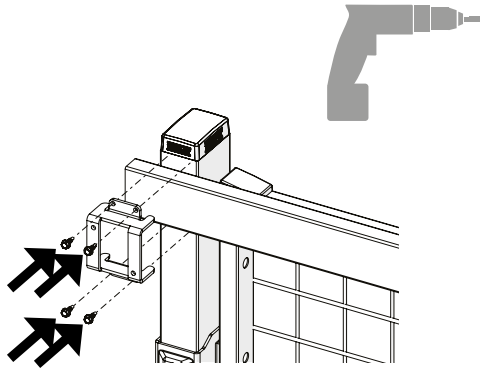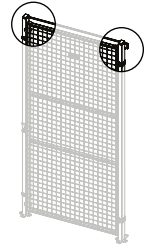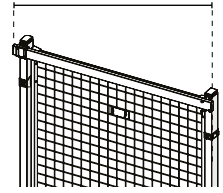



6





Max 30 Nm



17 mm

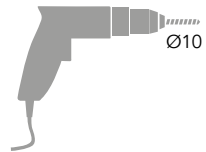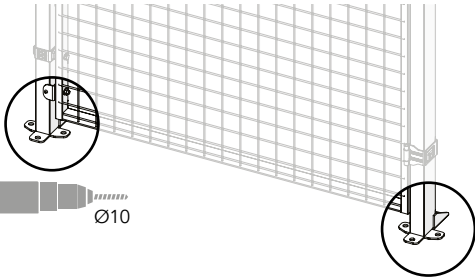


7

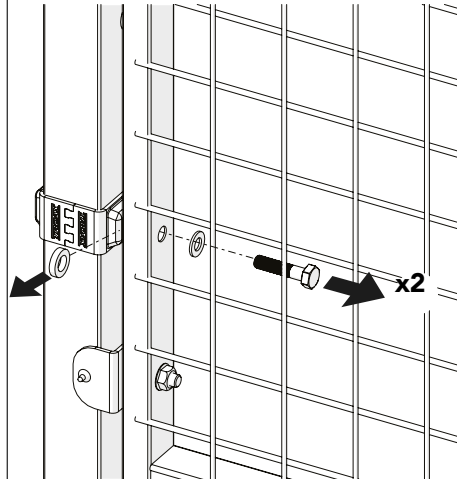

Art no: 88757960 ver.003





8

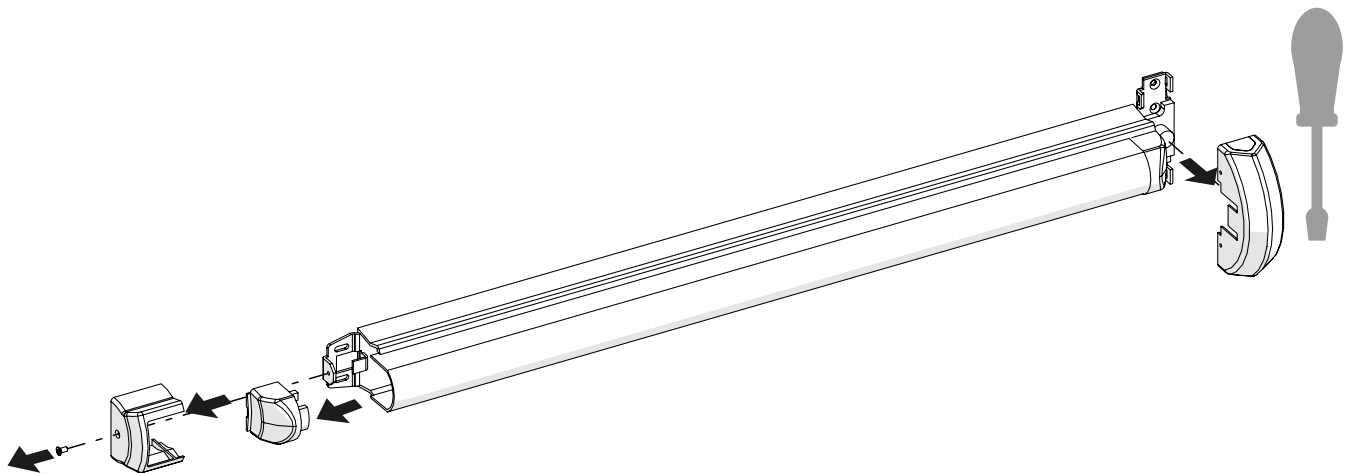
Kit 7960



Bag for kit 7950





9

-  M5x16
-  M5x12
-  M5
-  M5


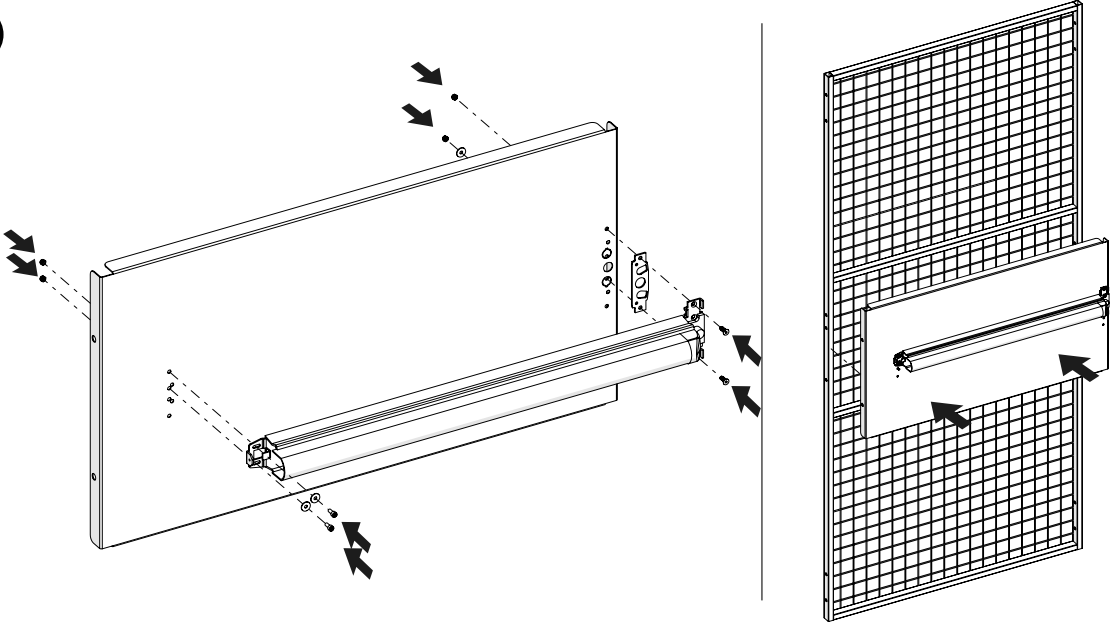



Bag for Kit 7960

10

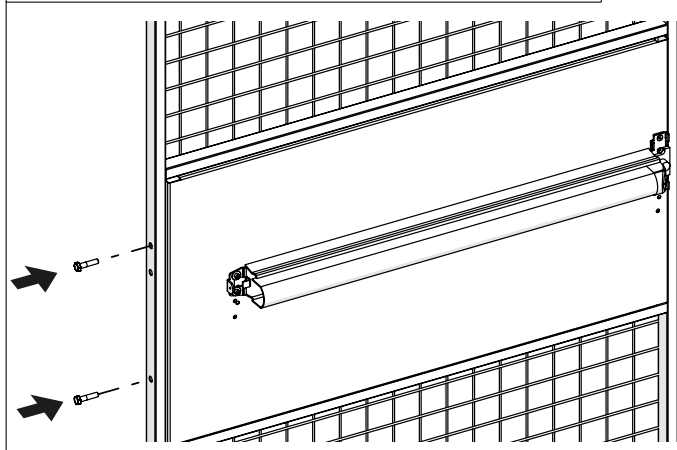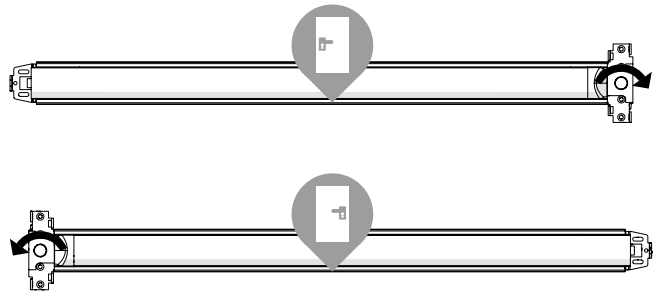


Art no: 88737960 ver.003

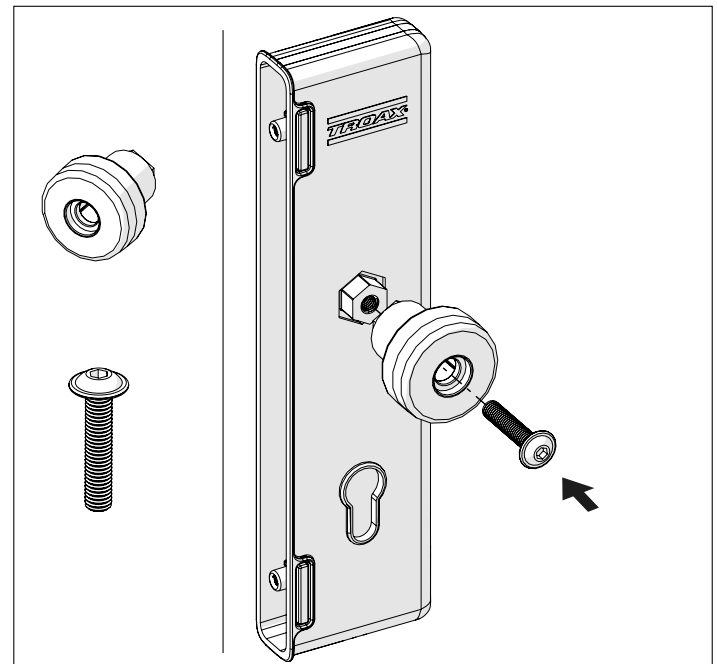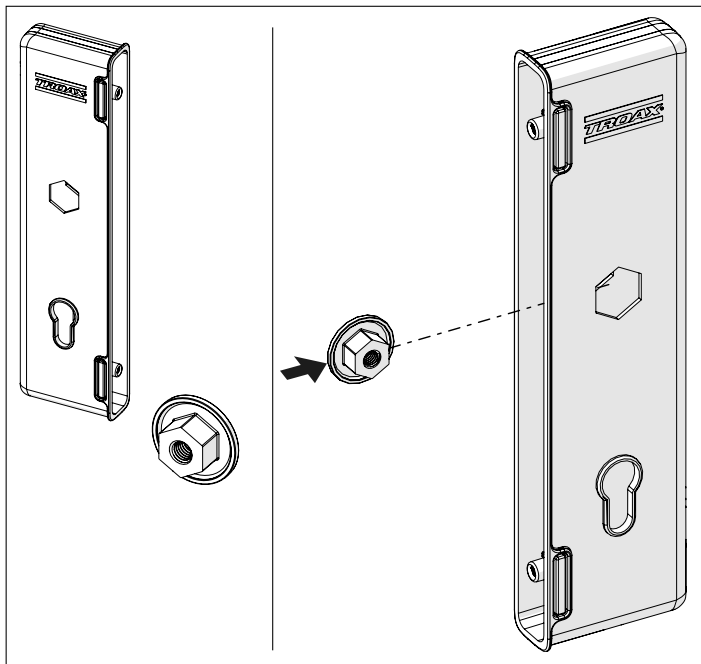

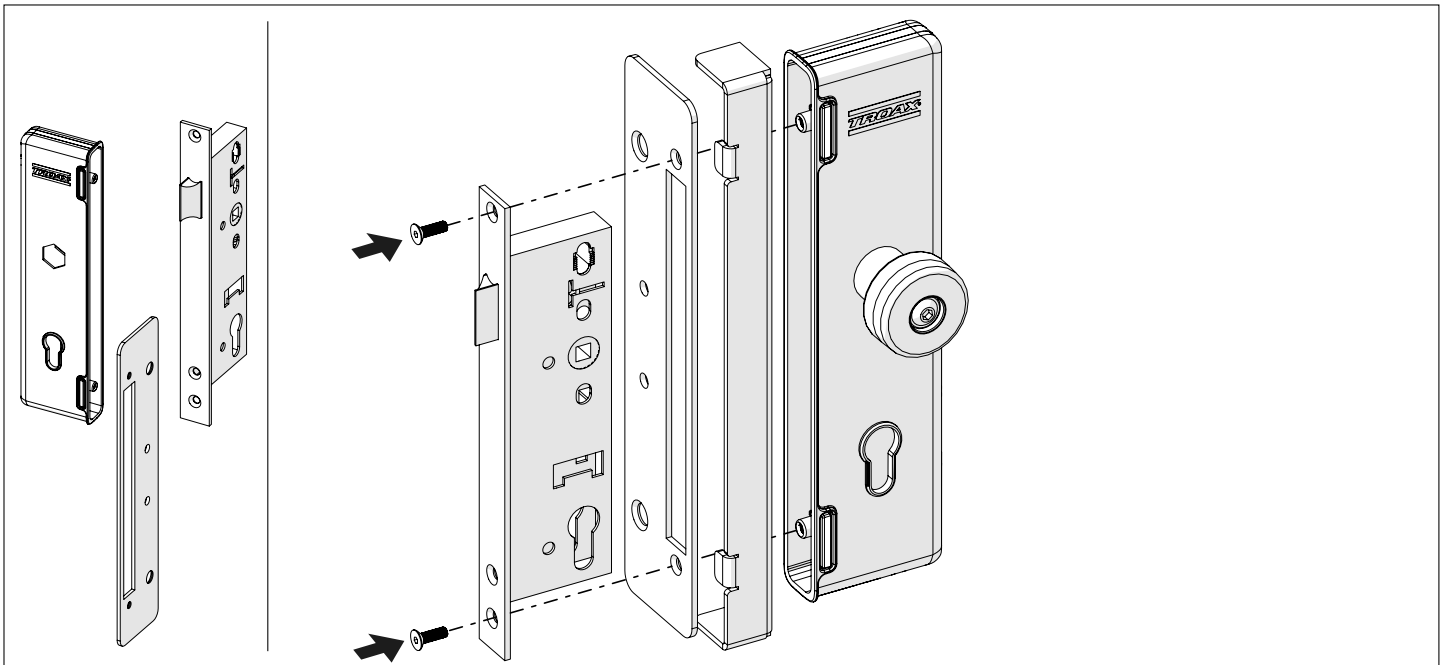

Bag for kit 7960


12

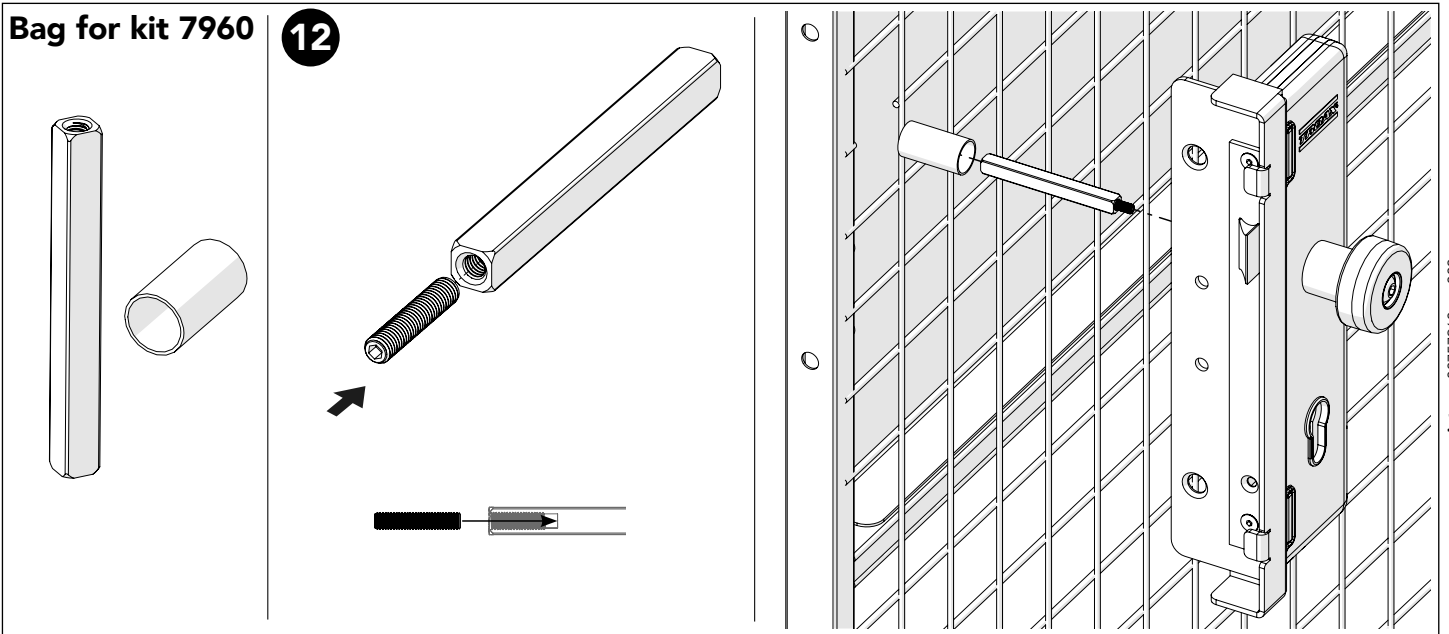

Art no: 88757960 ver:003





Bag for kit 5710

13


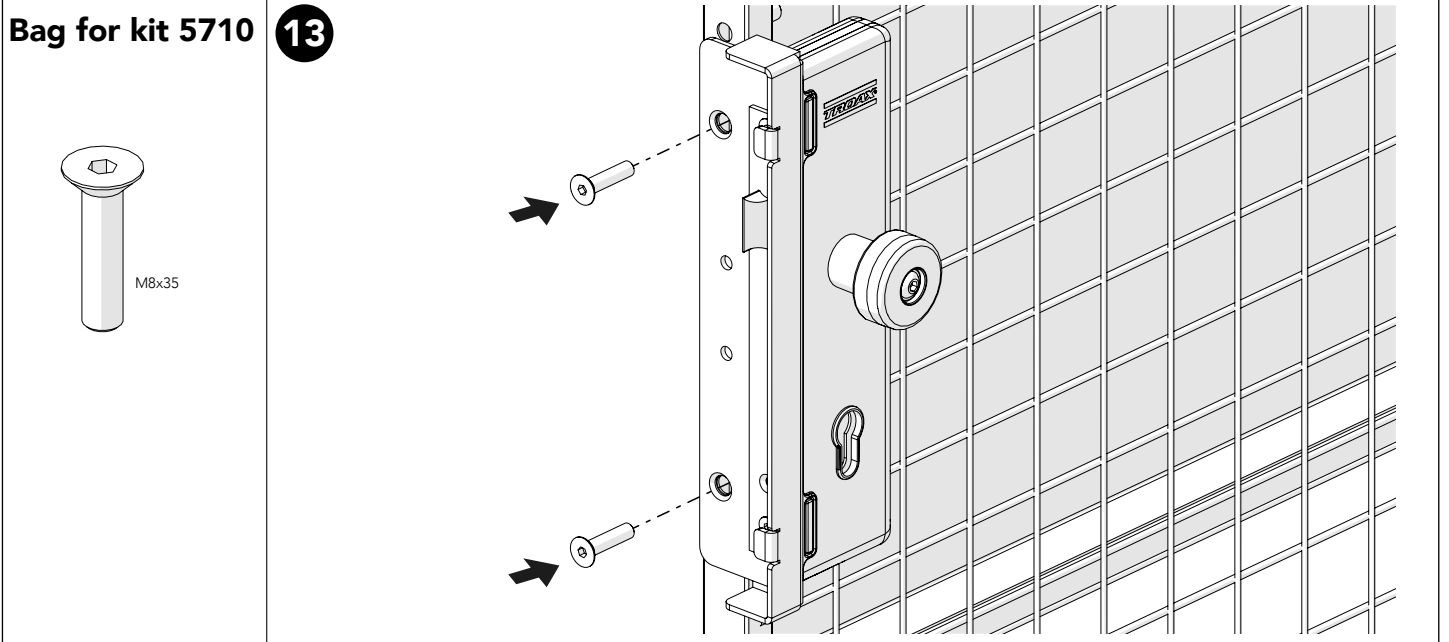


**Kit 7960+Bag
for kit 5710**

15

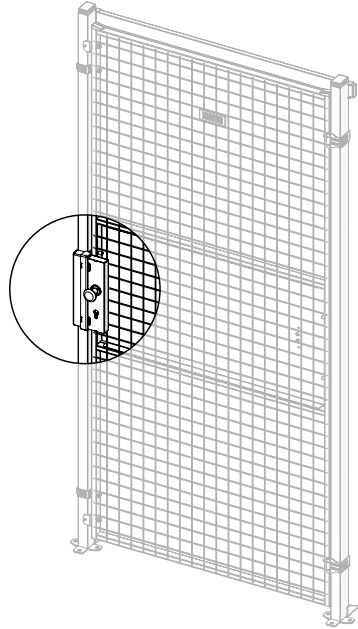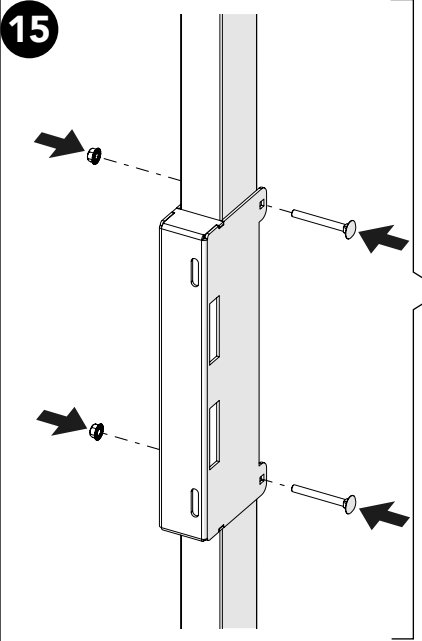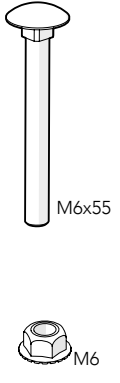


16

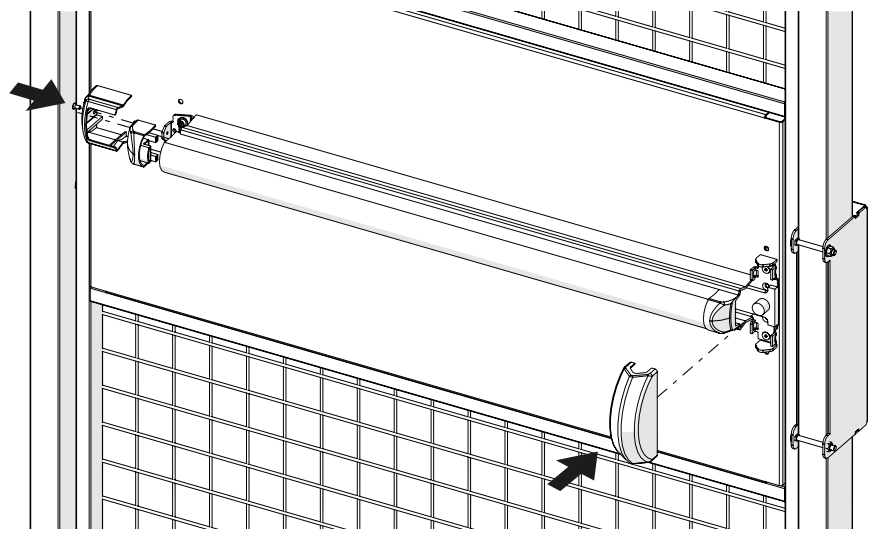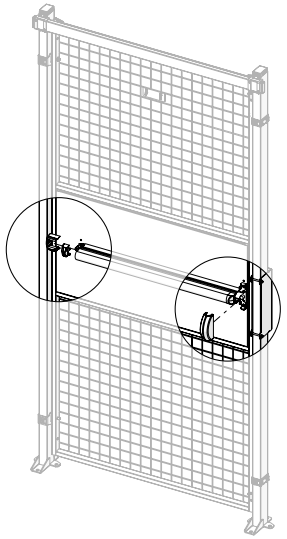

Art no: 88737960 ver:003

Bag for Kit 7960

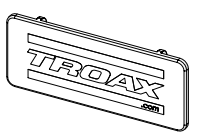

17

