




ASSEMBLY INSTRUCTION
– JUST FOLLOW ME

HINGED DOOR ES


KIT 36905500



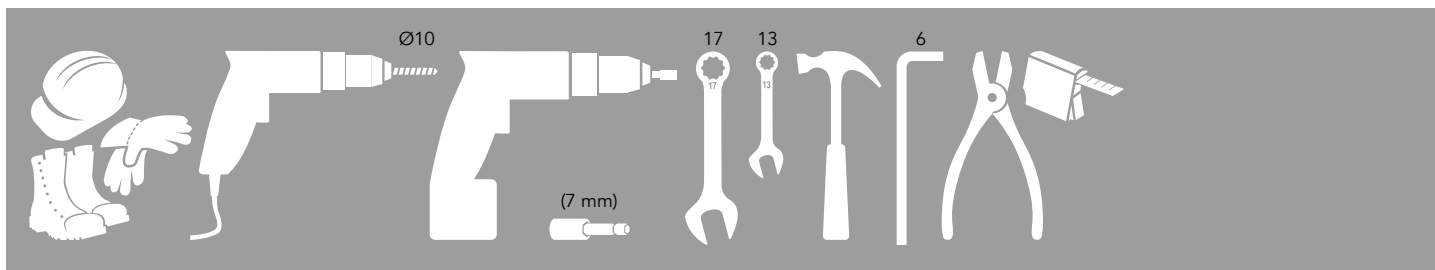


Kit Hinged door ES 36905500


Kit Hinged door ES 36905500

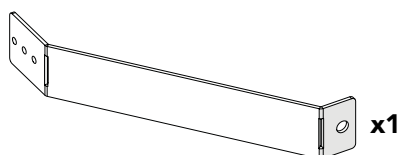


Bag for kit 88695500

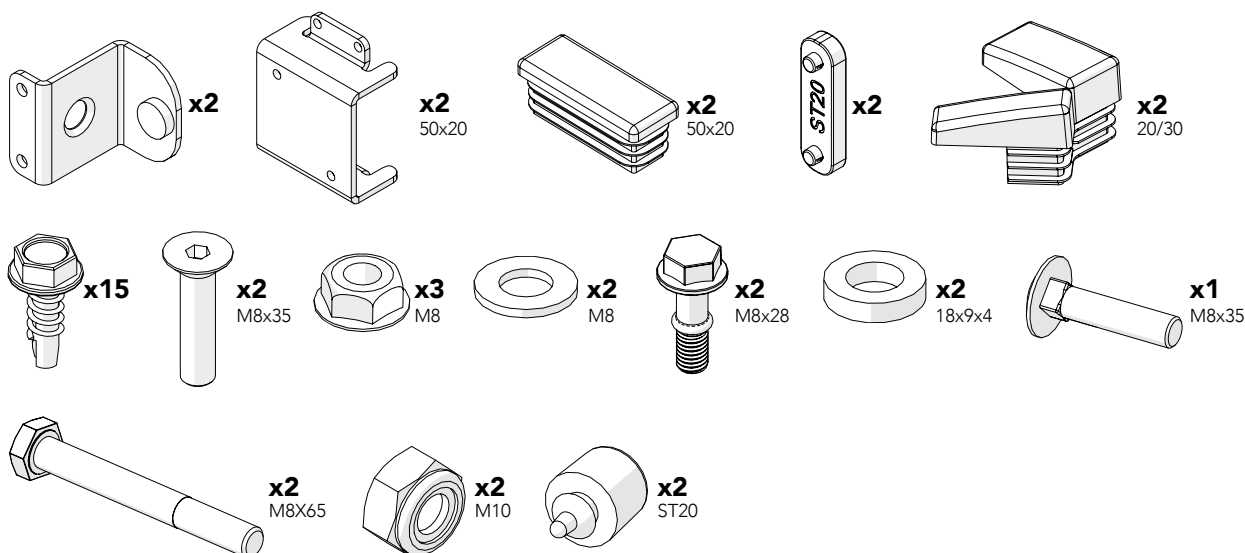


Kit Hinge 36904990

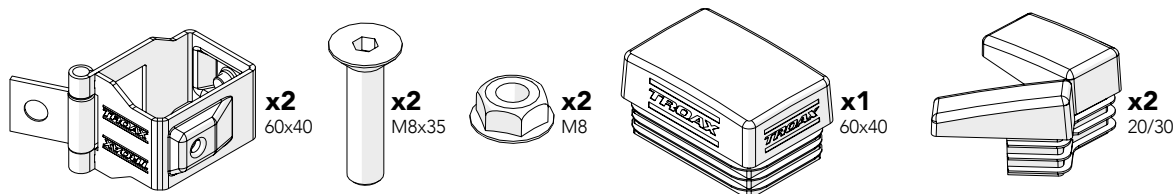



Kit Bracket SMF 36700074

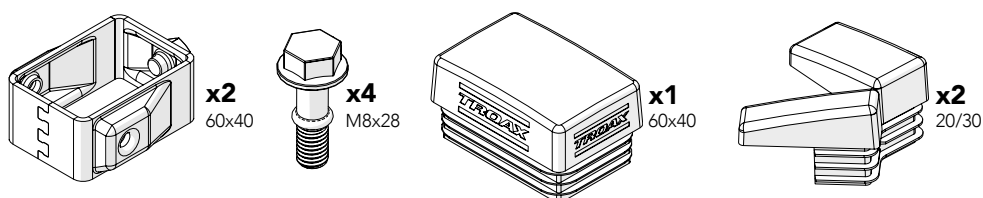


Troax sign 89200000

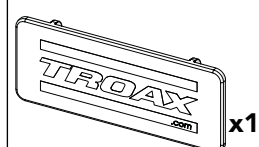


Kit Hinge

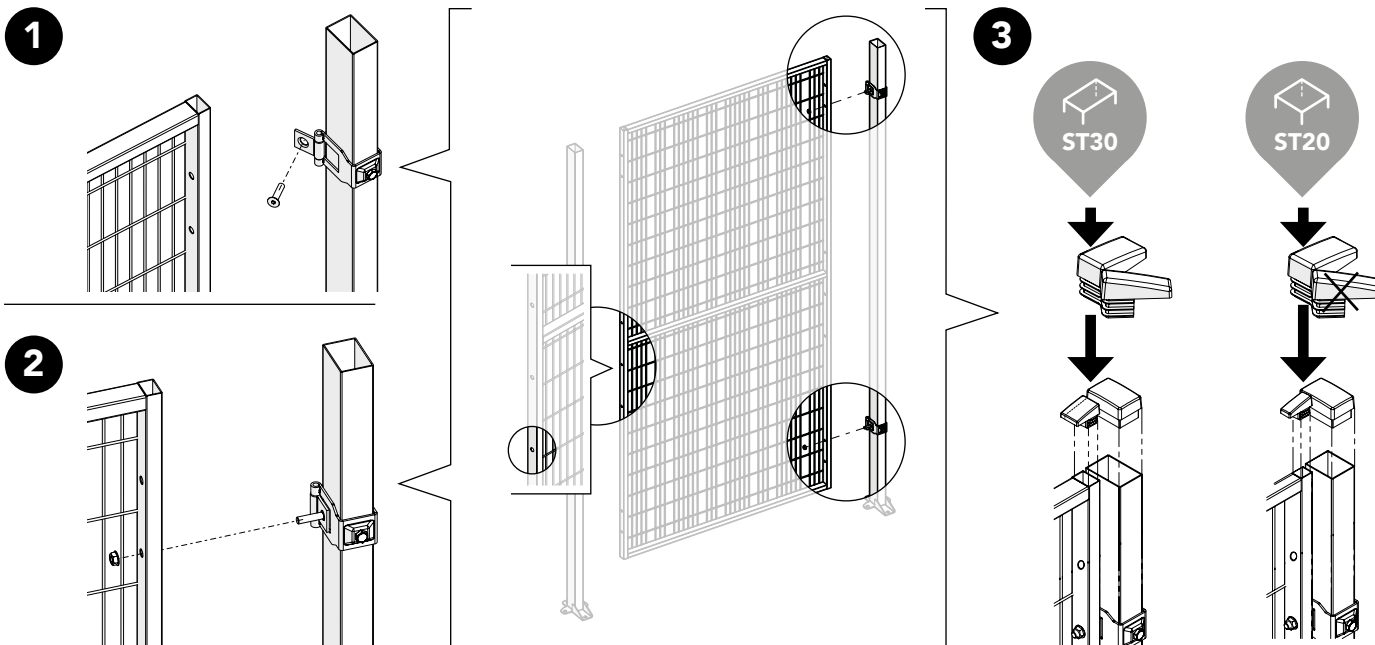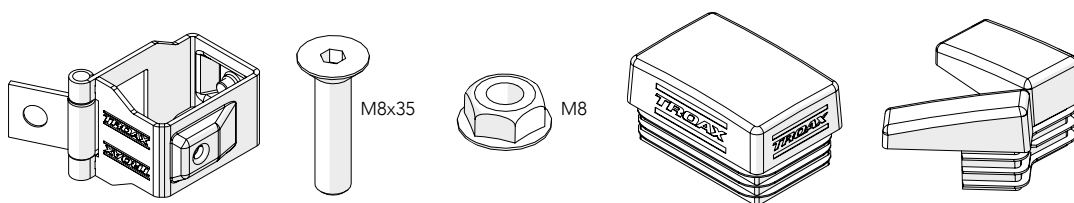




Bag for kit

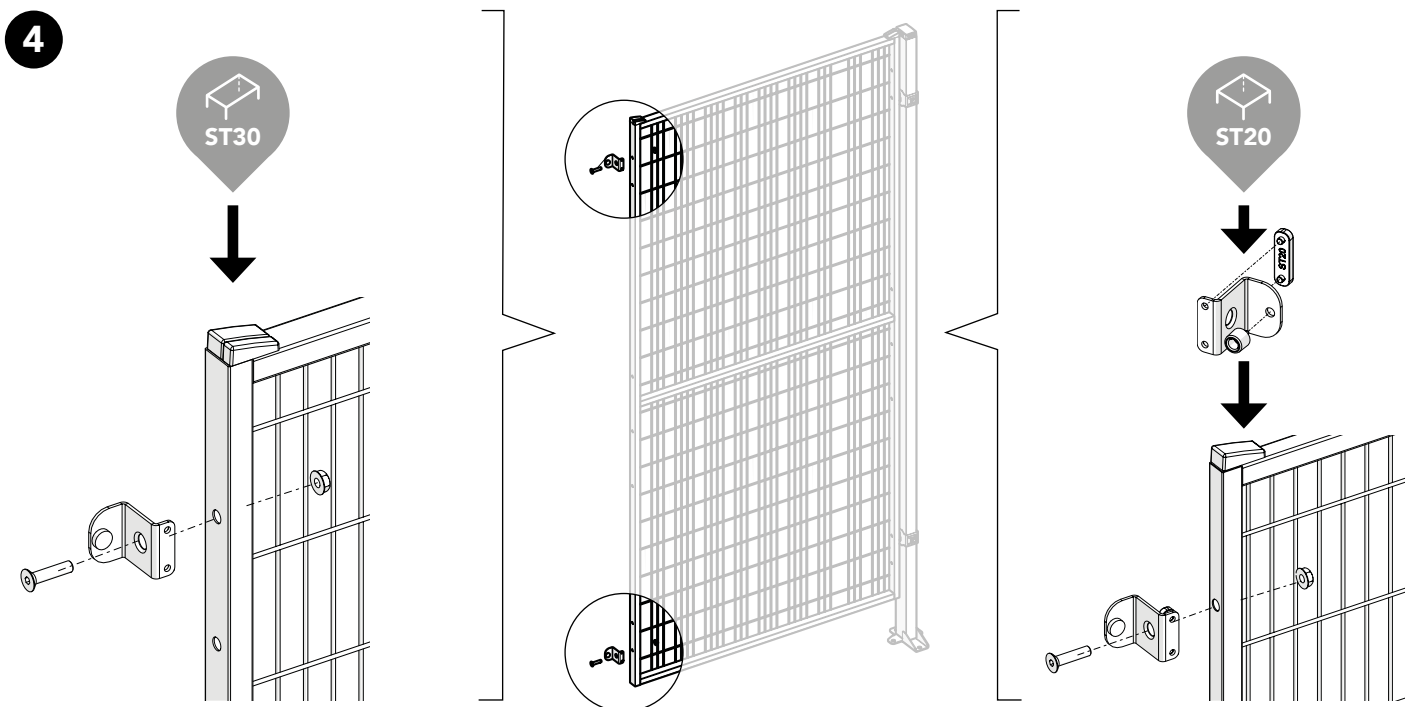


Kit bracket SMF

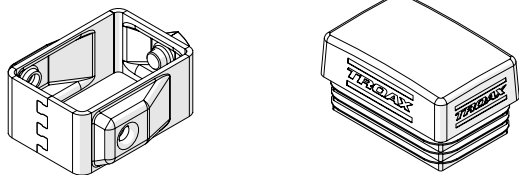


Bag for kit

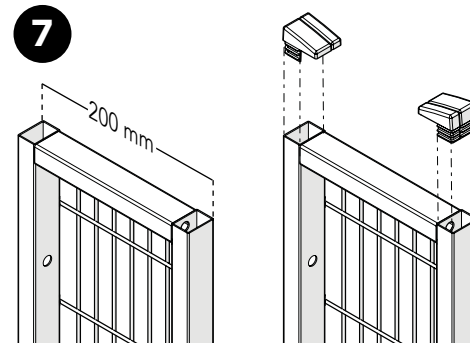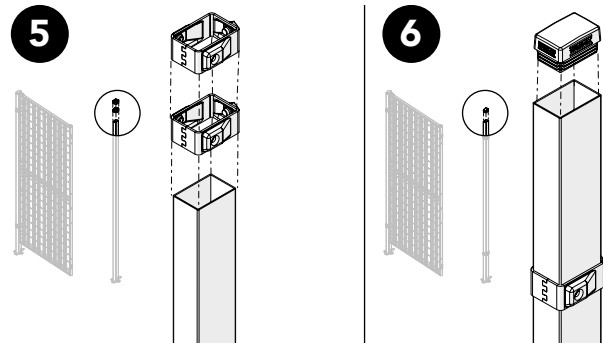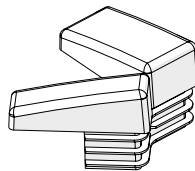


Bag for kit




M8x28

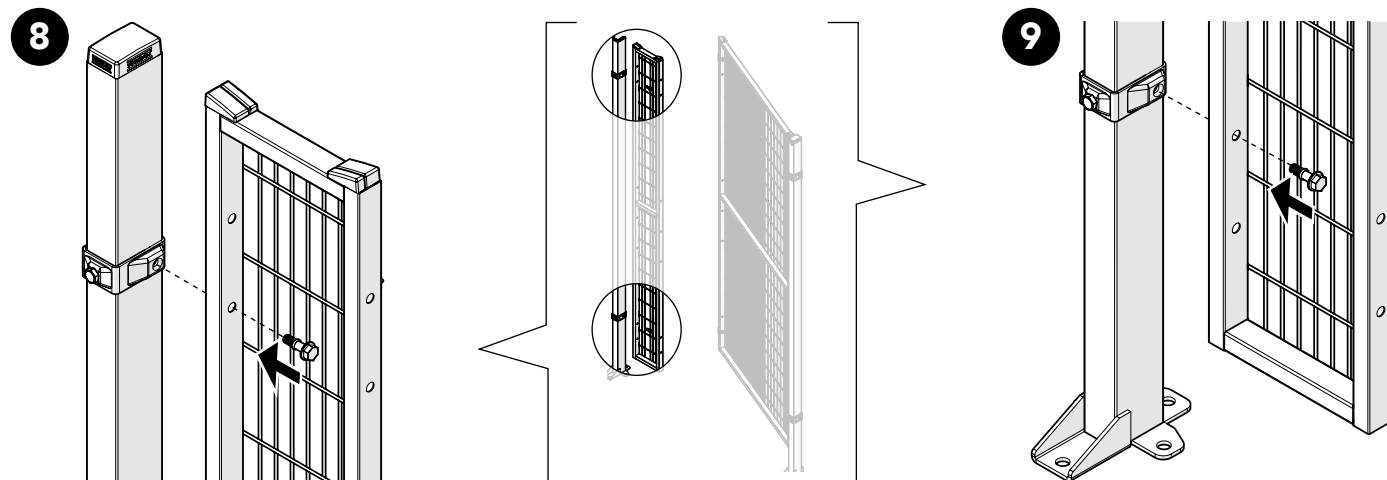


Support ES swingdoor

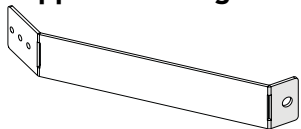

Bag for kit








M8



M8x35

Bag for kit

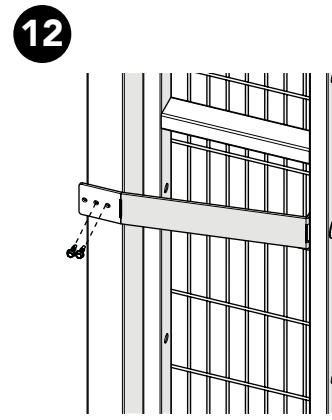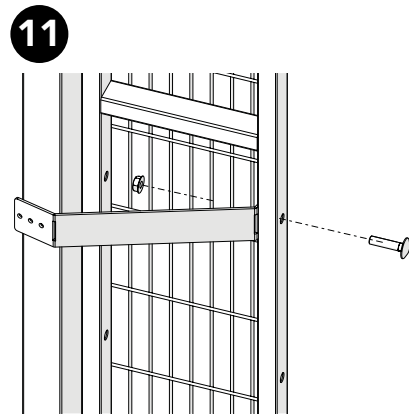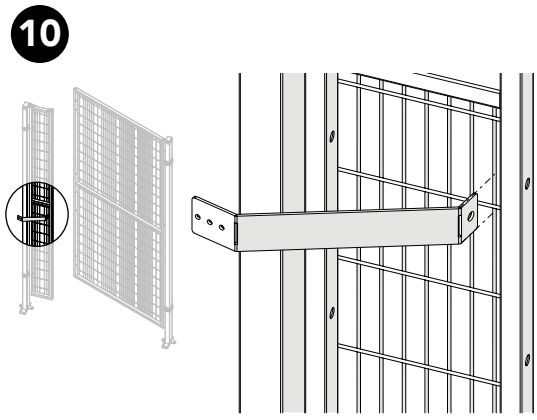





Bag for kit




13

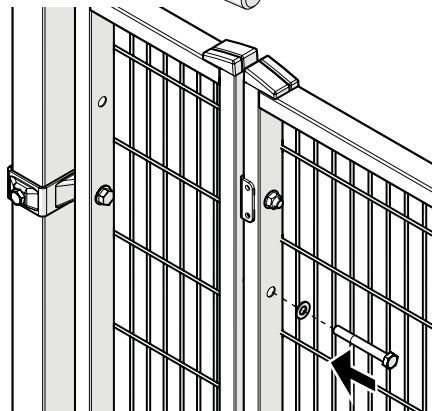


Bag for kit

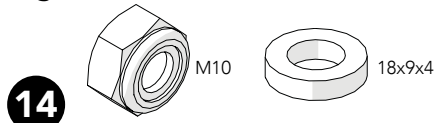


14

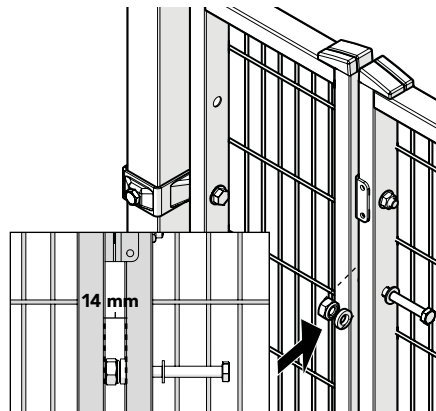


Bag for kit

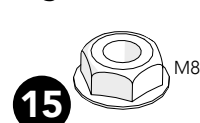

15

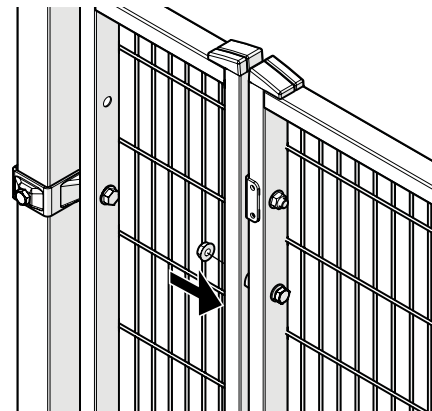


Bag for kit

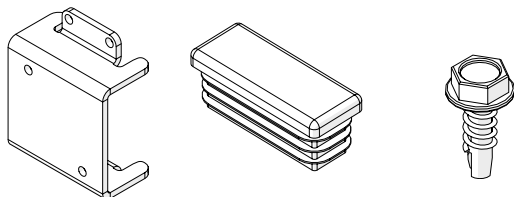



16

Door panel width

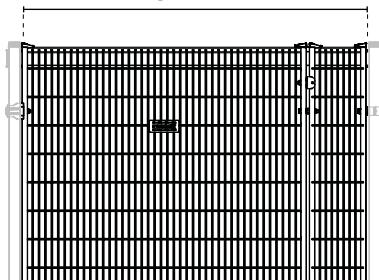


900	=	1010
1000	=	1110
1200	=	1310
1400	=	1510
1700	=	2110


Door stay length

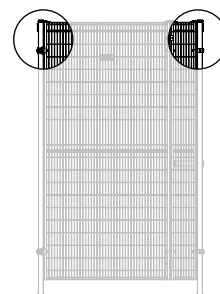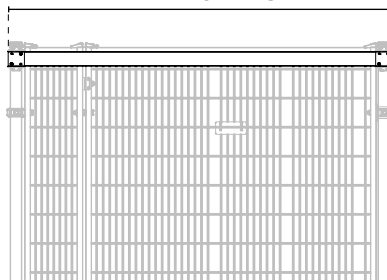

17

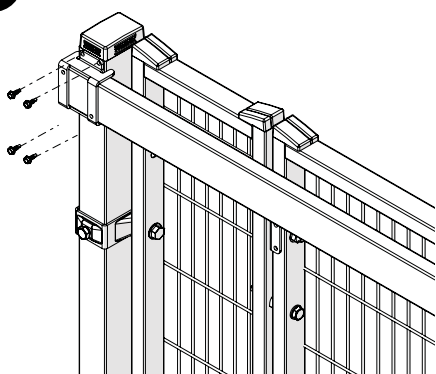

18

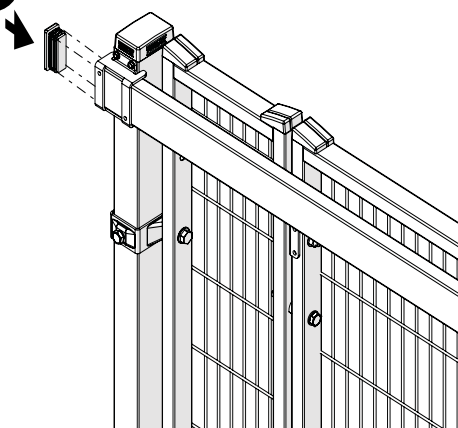

19

